


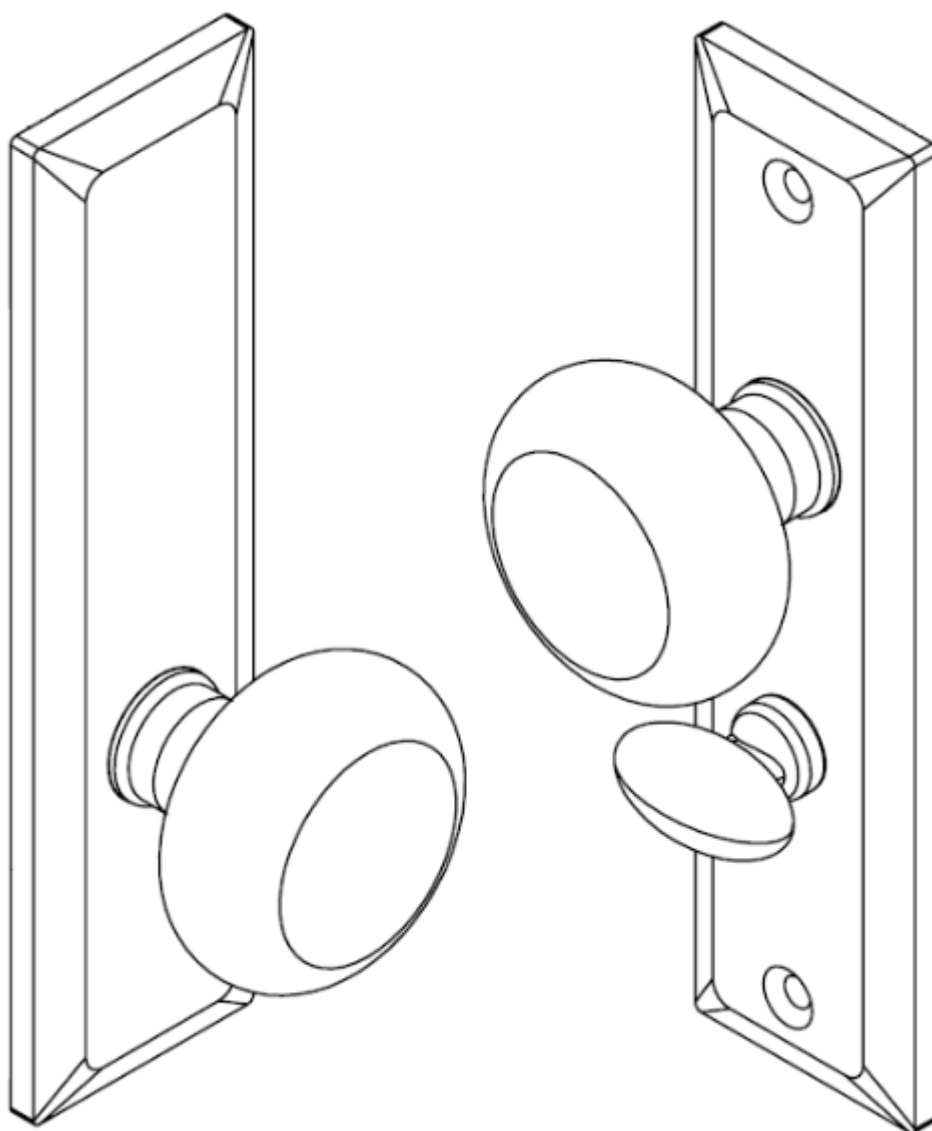

Peterson mortise screen door set

⚠ ENGLISH

CALIFORNIA PROPOSITION 65 WARNING: This product contains brass hardware components which contain lead, a heavy metal known by the State of California to cause cancer, birth defects, or other reproductive harm.

⚠ FRANÇAIS

AVERTISSEMENT RELATIF À LA PROPOSITION 65 DE LA CALIFORNIE: Ce produit contient du laiton qui contient des composants qui contiennent du plomb, un métal lourd connu dans l'État de la Californie pour causer le cancer, des malformations congénitales ou autres dommages au fœtus.

⚠ ESPAÑOL


ADVERTENCIA PROPOSICIÓN 65 DE CALIFORNIA: Este producto contiene componentes de ferretería de bronce, que contiene plomo, un metal pesado que es conocido en el Estado de California por causar cáncer, defectos de nacimiento y otros daños reproductivos.

MOUNTING INSTRUCTIONS FOR WOOD SCREEN DOOR APPLICATIONS


Tools required: Tape measure, Drill, drill bits, Philips screwdriver, Pencil, T Square, Chisel.

Note: This lock is non-handed. Refer to drawing for orientation based on door handing.

PARTS INCLUDED / PIÈCES INCLUSES / PARTES INCLUIDAS

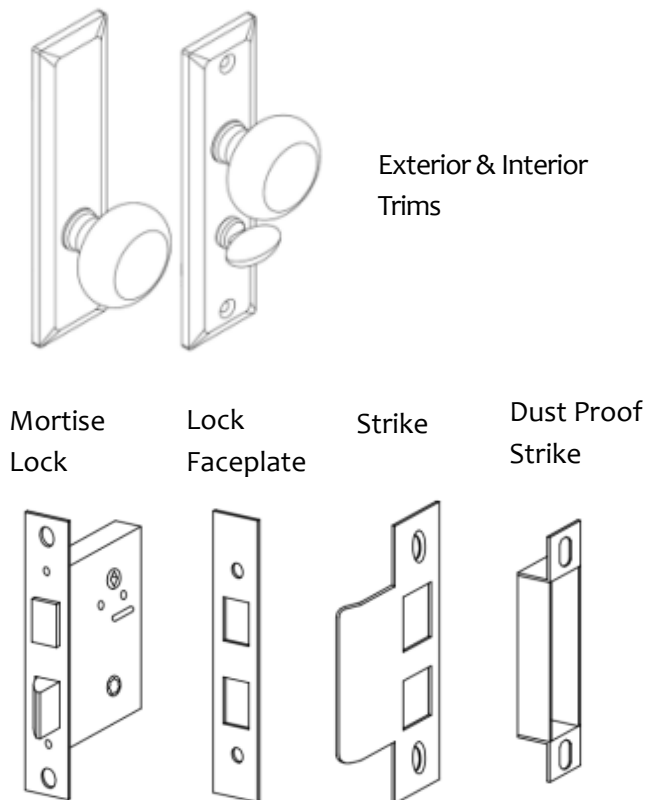

PARTS INCLUDED / PIÈCES INCLUSES / PARTES INCLUIDAS

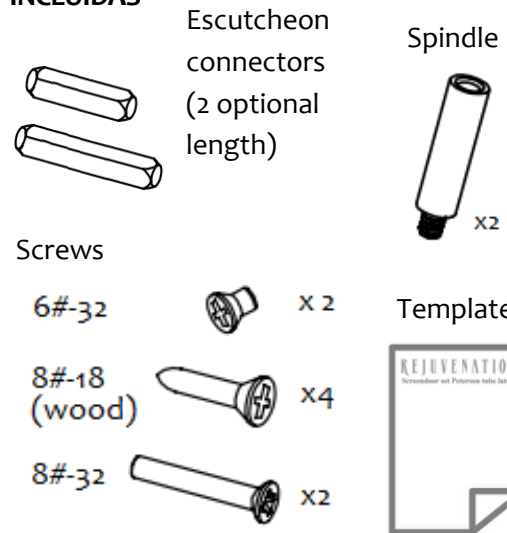


TOOLS/ OUTILS/ HERRAMIENTAS




NOT INCLUDED / NON INCLUS / NO INCLUIDAS

Exterior and Interior trim installation:

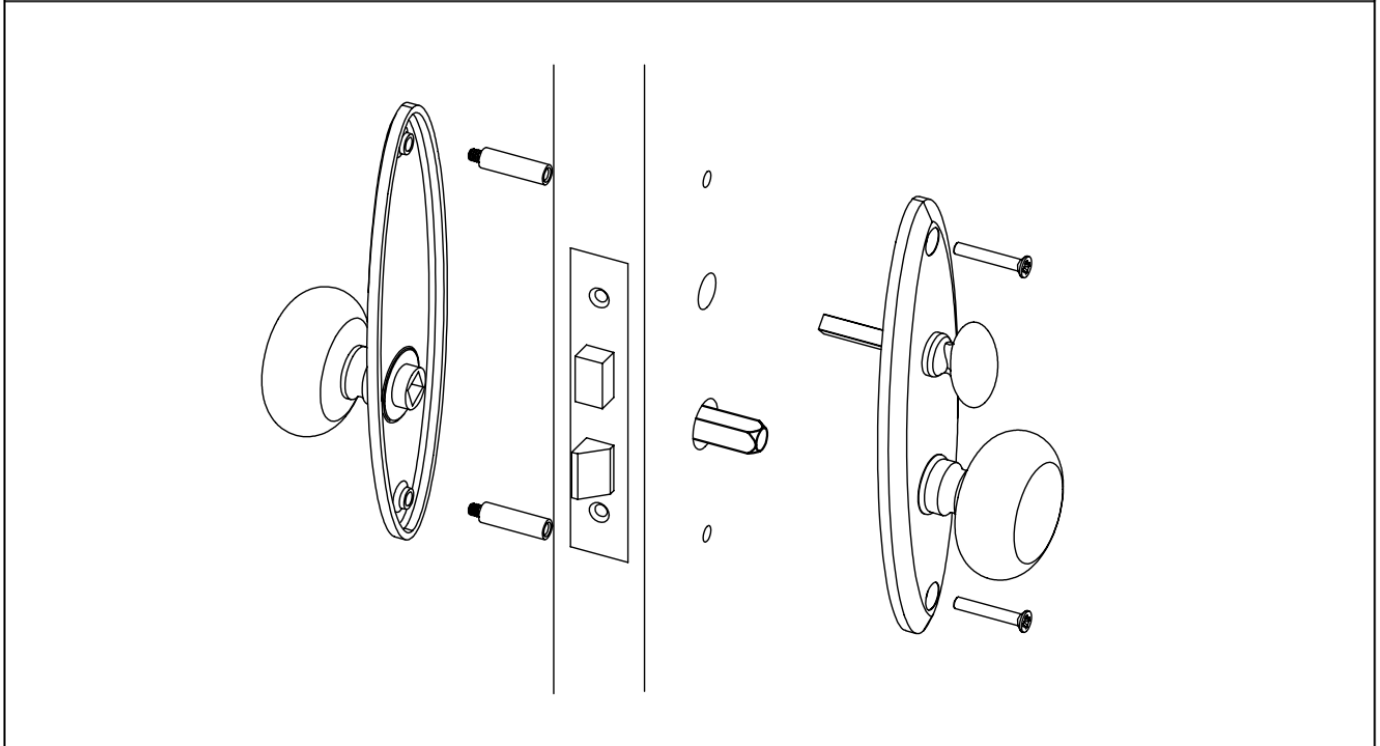

Door swings out to the right

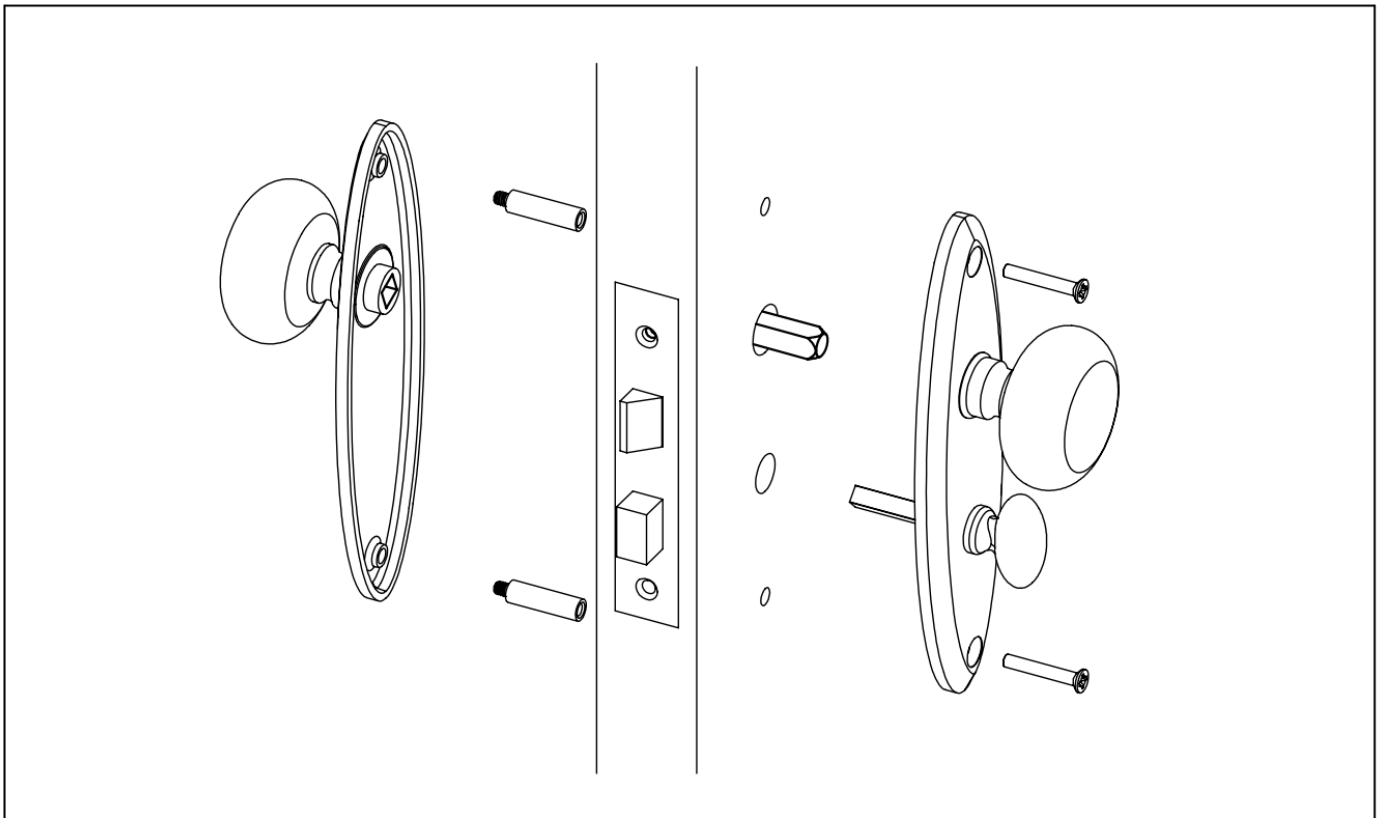


Door swings out to the left

Installing the mortise lock

1. Refer to the template and cut a mortise pocket into door edge for lock body.
2. Refer to template and mark and drill screw holes in face of door.
3. Install lock body into the door and supply with supplied wood screws.
4. Insert spindle into interior knob, then through the mortise lock and place the exterior trim on the door and secure with supplied machine screws.

Proceed with installing strike after the door set is installed on door.

1. To transfer the proper position to the door jamb, mark the mortise lock by rubbing graphite, crayon or lipstick onto the latch and deadbolt of the mortise lock.
2. Close the door and turn the thumb-turn to activate the deadbolt several times, leaving a faint (graphite, crayon or lipstick) mark on the door frame.
3. The resulting marks will give centering positions for the strike.
4. Mortise a deep pocket for the dust box and a shallow pocket for the strike faceplate.
5. Install the dust box and faceplate with supplied screws.

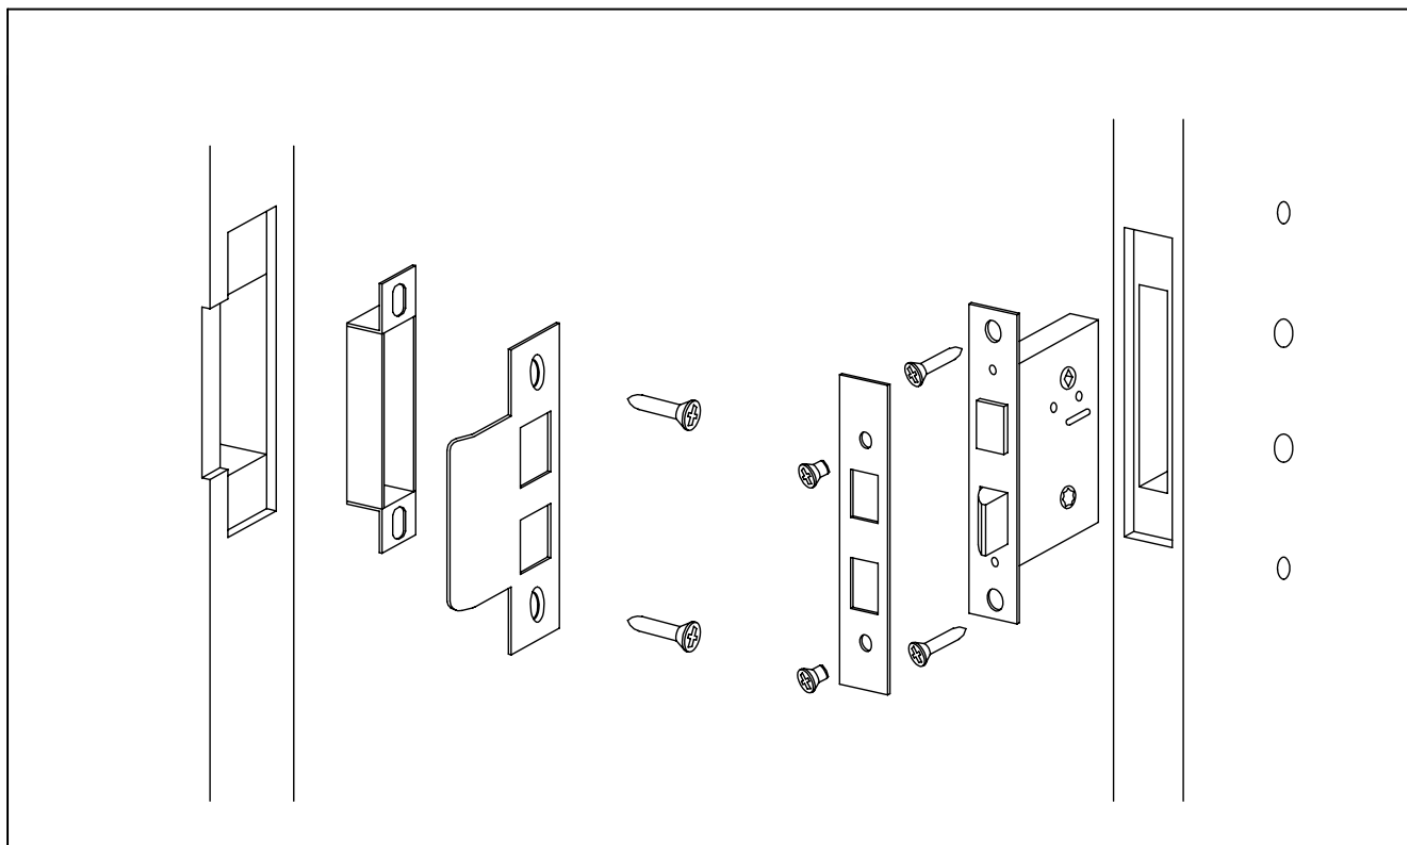

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills and wipe with a clean, damp cloth immediately.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.