



Installation Instructions for 12V SURFACE LIGHT

INSTALLATION FOR 12V LED FIXTURES SURFACE, DOWN OR UP/DOWN FIXTURES

NOTE: TO PREVENT ELECTRICAL SHOCK, DISCONNECT FROM ELECTRICAL SUPPLY BEFORE INSTALLATION OR SERVICE.

1. Using thread sealant, thread fixture onto junction box or other mounting device (not supplied) until it is at desired direction. Tighten provided lock nut to ensure that the fixture is firmly locked into position.
2. Attach fixture lead to in leads using approved silicone filled safety wire connectors (not provided).
3. Adjust fixture aiming angle (when applicable), loosen swivel screw using screwdriver. **Do not remove completely.** Hold fixture at selected angle and tighten swivel screw firmly.
4. Turn on power to the fixture and check for proper operation.

Lamp Replacement

NOTE: TO PREVENT ELECTRICAL SHOCK, DISCONNECT FROM ELECTRICAL SUPPLY BEFORE INSTALLATION OR SERVICE.

1. Remove top lid by turning counter clockwise.
2. Disconnect LED module's quick connect by turning washer counter clock wise until the LED module comes apart.
3. Replace LED engine.
4. Replace lid.