

Mortised Pocket Door Hardware

skill level • advanced
carpenter

Passage Door Set

installation instructions

Door Thickness

This item is designed to work with pocket doors of 1-3/8" to 2-1/2" thickness.

1. Determine the height you wish to install your pocket door pull and door plates.

Note: Standard height for door sets is between 32" and 42" from floor.

For this non-locking Passage Set, the door plates can be installed in any location relative to the mortise pull body.

2. Referring to the template, cut mortise into door edge for the mortise body.

Note: A shallow recess is for the faceplate and a deeper one for the mortise body.

3. Install mortise pull body into the door and secure with two supplied phillips wood screws.


4. Referring to the template, cut mortises for door plates.

5. Position door plates and mark location of all mounting holes.


6. Drill pilot holes for door plate attachment screws.

7. Install the door plates using supplied wood screws.

Note: For doors that are less than 1-1/2" thick, use the set of four shorter screws.

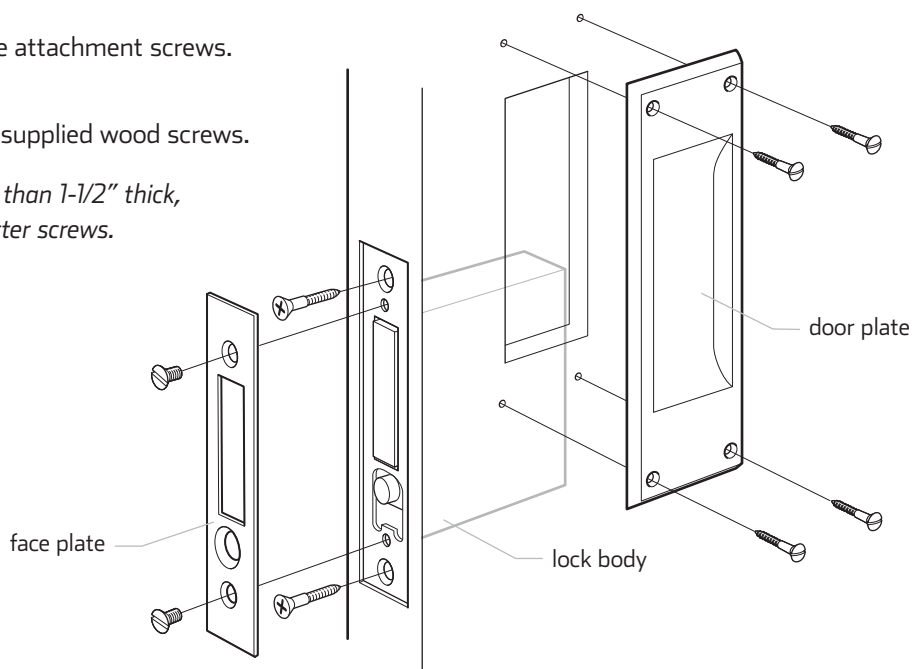

toolbox

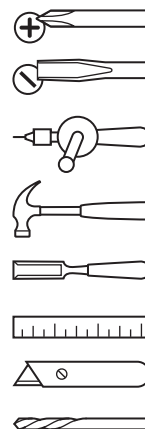

REJUVENATION®

2550 N.W. Nicolai Street, Portland Oregon 97210 • Customer Service: (888) 401-1900 • rejuvenation.com

Mortised Pocket Door Hardware

skill level • advanced carpenter

Single or Double Privacy Set - Locking Mortise Body

installation instructions

Door Thickness

This item is designed to work with 1-1/2" to 2-1/2" thick pocket doors.

1. Determine the height you wish to install your pocket door mortise lock and door plates.

Note: Standard height for door sets is between 32 and 42 inches from floor.

2. As specified on template, mark and drill backset hole for thumb-turn and keyhole.

3. Referring to the template, cut mortise into door edge for the mortise lock body.

Note: A shallow recess is for the face plate and deeper one for the mortise lock body.

4. Install mortise lock body into the door and secure with two supplied phillips wood screws.

5. Install the face plate using the two supplied machine screws.


6. Refer to template and cut mortises for door plates.

7. Position door plates and mark location of all mounting holes.

Note: Plate with thumb-turn or plate with key hole can go on either side of door.

8. Drill pilot holes for door plate attachment screws.

9. Install the door plates using supplied wood screws.

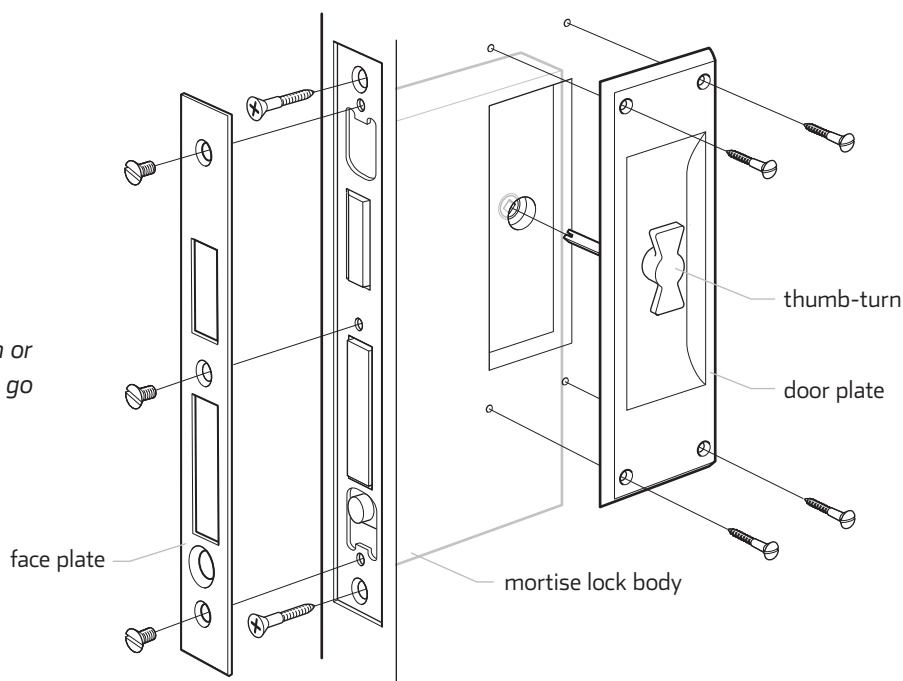

To complete installation, proceed to instructions for installing Pocket Door Single Privacy Set - Jamb Side Parts or Pocket Door Double Privacy Set- Dummy Mortise Body.

Emergency Key

This lock does not use an actual key. It can be unlocked through the keyhole using the emergency key provided or with a flat-head screwdriver.

REJUVENATION®

2550 N.W. Nicolai Street, Portland Oregon 97210 • Customer Service: (888) 401-1900 • rejuvenation.com

Mortised Pocket Door Hardware

skill level • advanced
carpenter

Double Privacy Set- Dummy Mortise Body

installation instructions



Proceed with installing this item after mortise lock body is installed.

Door Thickness

This item is designed to work with 1-1/2" to 2-1/2" thick pocket doors.

1. To transfer the proper position to the edge of the secondary door, rub graphite, crayon or lipstick onto the privacy bolt (not the pull) of the mortise lock body, which is already installed.
2. Close the door and turn the thumb-turn to actuate the deadbolt a few times.
3. Based on the resulting markings, position the dummy mortise body face plate so that the latch will be centered in the appropriate face plate opening - in both vertical and horizontal directions.
4. Trace the outline and features of the face plate onto the edge of the secondary door.
5. Referring to the template, cut mortise into door edge for the dummy mortise body.
Note: The shallow recess is for the face plate and deeper one is for the dummy mortise body.
6. Install dummy mortise body into the door and secure with two supplied phillips wood screws.
7. Install the face plate using the two supplied machine screws.
8. Refer to template and cut mortises for door plates.
- Note: Align with plates on locking door already installed.*
9. Position door plates into position and mark location of all mounting holes.
10. Drill pilot holes for door plate attachment screws.
11. Install the door plates using supplied wood screws.

toolbox

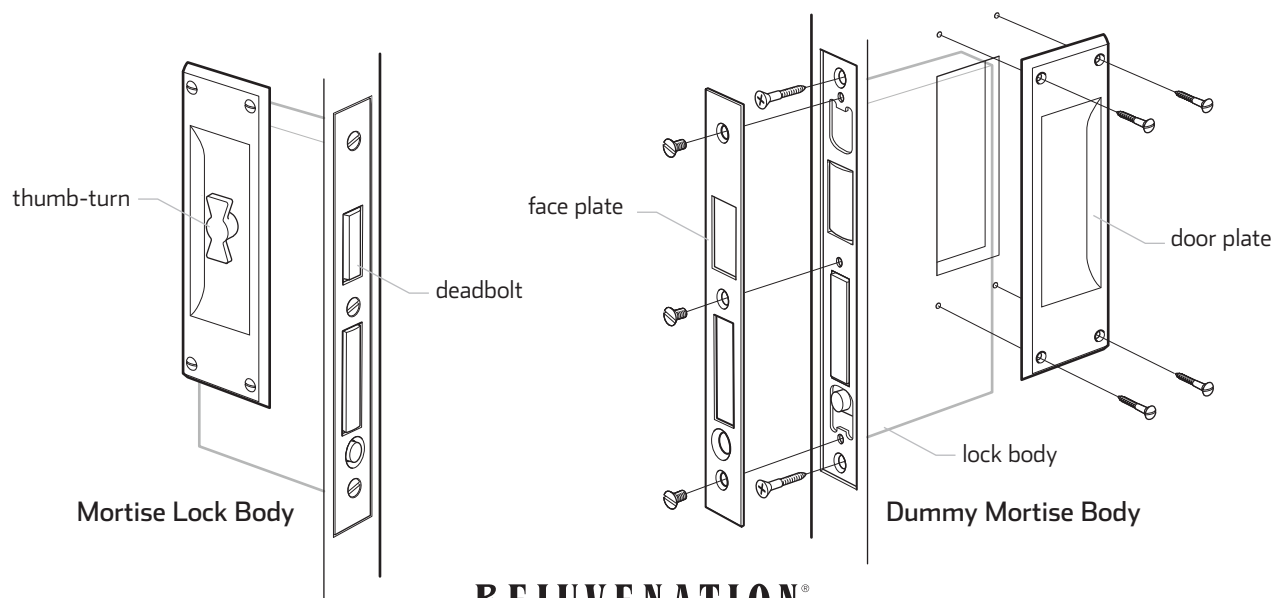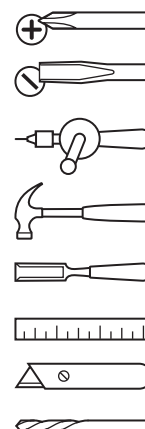

REJUVENATION®

2550 N.W. Nicolai Street, Portland Oregon 97210 • Customer Service: (888) 401-1900 • rejuvenation.com

Mortised Pocket Door Hardware

skill level • advanced
carpenter



Single Privacy Set - Jamb Side Parts

installation instructions

Proceed with installing this item after pocket door set is installed in door.

1. To transfer the proper position to the door jamb, rub graphite, crayon or lipstick onto the latch of the pocket door mortise lock, which is already installed.
2. Close the door and turn the thumb-turn to actuate the deadbolt a few times.
3. Based on the resulting markings, position the strike plate so that the latch will be centered in the strike opening, in both vertical and horizontal directions.
4. Trace the outline of the strike plate onto the jamb. Include rectangular cut-outs and mounting holes.
5. Mortise a 1-1/8" deep pocket for the dust box, and a shallow 1/8" deep pocket for the strike plate.
6. Drill pilot holes for the strike plate attachment screws.
7. Fit the dust box into place with the strike plate over it, and secure with two supplied wood screws.

• toolbox

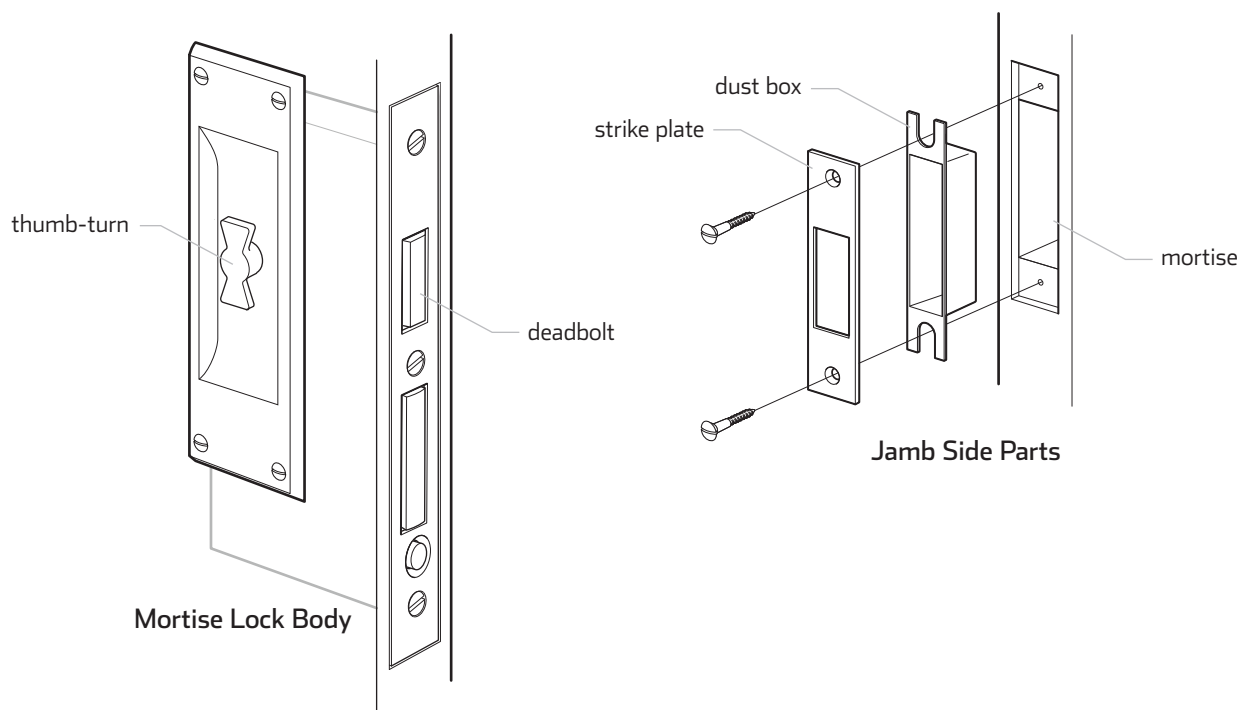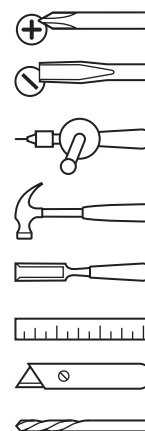

REJUVENATION®

2550 N.W. Nicolai Street, Portland Oregon 97210 • Customer Service: (888) 401-1900 • rejuvenation.com