
Wall Fixtures with Slip-Type Canopies

basic electrician

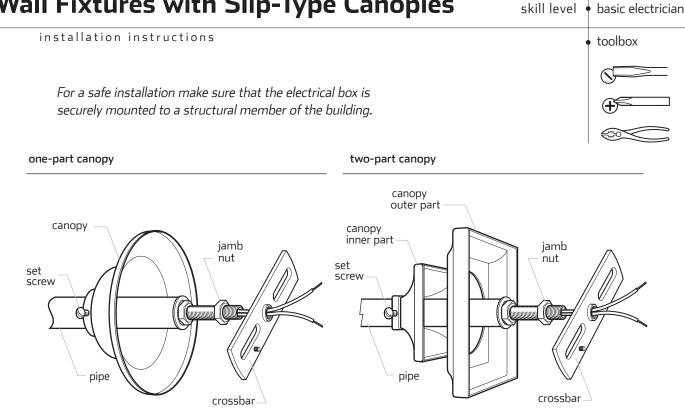

- 1. Attach crossbar to electrical box using screws supplied with the box.
 - * Sometimes it is necessary to mount the crossbar at a slight upward angle so that the weight of the fixture does not make it seem to droop. A washer or two under the lower screw can be useful as shims.
- 2. Loosen set screw on canopy and slip canopy down pipe, carefully to avoid scratching the finish.
- 3. Screw jamb nut approximately 1/2" down threaded pipe.
- 4. Slip wires through hole in crossbar and screw the fixture into the crossbar, turning clockwise. * Make sure the wires turn with the fixture and do not become twisted.
- 5. When fixture is correctly positioned, tighten jamb nut securely against crossbar.
- 6. Make wiring connections in accordance with local electrical codes. See "Important Information" on reverse side.
- 7. Carefully slide canopy up against wall and tighten set screw to secure it. If installing a two-part canopy, make sure the two pieces are aligned with each other before tightening the set screw.

Complete !

REJUVENATION[®]