


REJUVENATION

Installation Instructions Professional Grade Quality Solid Brass 10" Casement Adjuster

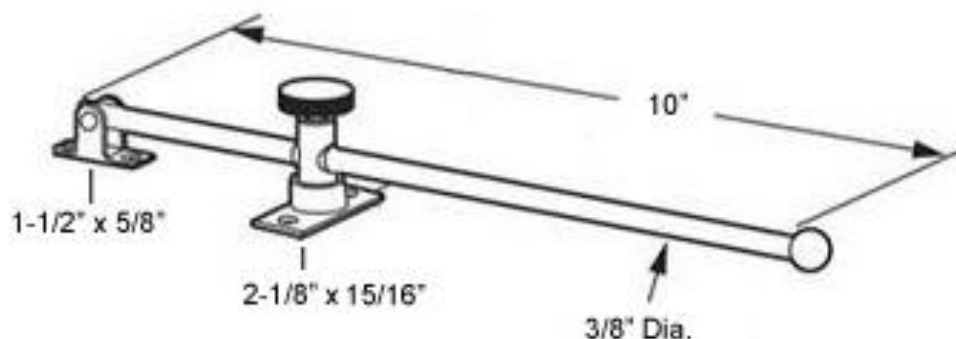

Dimensions:

- Overall Length: 10-3/4"
- Arm Length: 10-1/4"
- Projection: 1-15/16"
- Rod Diameter: 3/8"
- Knob Diameter: 1-1/16"
- Net Weight: 10.5 oz.
- Gross Weight: 12.5 oz.
- Solid Brass Wood Screws

Dimensions are for reference use only.

For exact dimensions, please measure actual part.

Installation Instructions:

1. Position casement adjuster on window sill flush to bottom rail, leaving ball end or rod a minimum 1/2" from window frame.
2. Mark and drill pilot holes in mounting piece and base.
3. Pull rod inward and secure mounting piece to window and base to sill.

Note: To keep in desired open position, tighten knob



For technical support, please call 888-401-1900

10" Casement Adjuster

Date: Rev 02/18