


(Product may differ)

Framed Pivot Mirror



 **WARNING:** This product can expose you to chemicals including Lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

BOX 1:

Pivot Mirror 1 pc

BOX 2:

Drywall Anchors	4 pcs	Decorative Wall Brackets	2 pcs
Mounting Screws	4 pcs	Mounting Plates	2 pcs
Allen key	1 pc		



Drywall Anchor

Mounting Screw


Set Screw

Allen Key

MOUNTING INSTRUCTIONS FOR TYPICAL DRYWALL APPLICATIONS

Note: Consult your local hardware store for proper mounting to other wall materials.



Tools required: Phillips screwdriver, pencil, tape measure, and level.

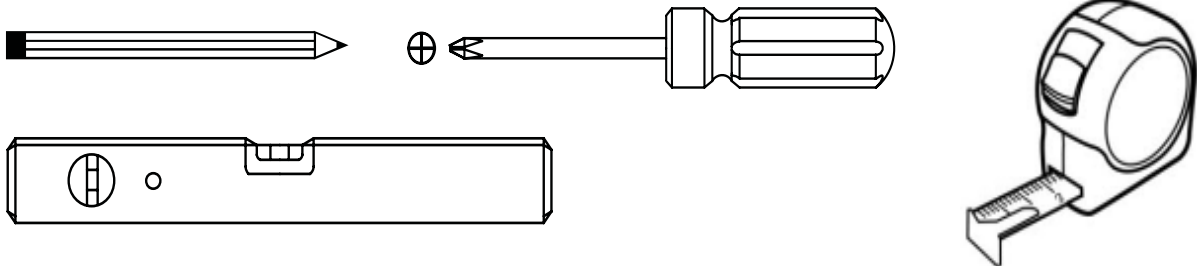

1. With the mirror face down on the floor, install the pivot brackets onto the mirror posts and measure the distance from center to center of the brackets. Use this measurement to determine the location for the mounting plates in relation to the center of the mirror.
2. Loosen set screws from bottom of both Decorative Wall Brackets to release the mounting plates. (It is a good idea to back off the secondary set screw as well.)
3. Place one of the mounting plates in desired location. Using a pencil, lightly mark the location of the mounting holes. Remove the mounting plate from the wall.
4. Install the drywall anchors: using only a Phillips screwdriver, pierce the tip of the anchor into the wall. Do not push or pound the anchors into the wall; they are designed to bore into the wall like a screw. Turn clockwise until anchor is flush with the wall.
***Note: you can use the tip of a Phillips head screwdriver to create a pilot hole.**
5. Once the first set of anchors are in place, use a pencil a tape measure and a level to lightly mark the location of the second set of anchors (use dimension determined in step #1).
6. Mark the hole locations of the other 2 drywall anchors using the second mounting plate. Install the second set of anchors as directed in step #4.
7. Install both mounting plates with the provided screws and tighten.
8. Place one Decorative Wall Bracket over the mounting plate (making sure set screws are facing down).

Tighten the set screw.

9. Press the second Decorative Wall Bracket onto the opposing mirror pivot post and **re-tighten** the set screw.
10. Carefully lift the mirror and slide the mirror pivot post onto the corresponding wall bracket previously mounted to the wall. Clip the mirror and pivot mirror bracket over last mounting plate and tighten all set screws.
11. If necessary, loosen wall mounting screws and adjust mounting bracket to obtain proper horizontal alignment on wall. Re-tighten screws and remount.

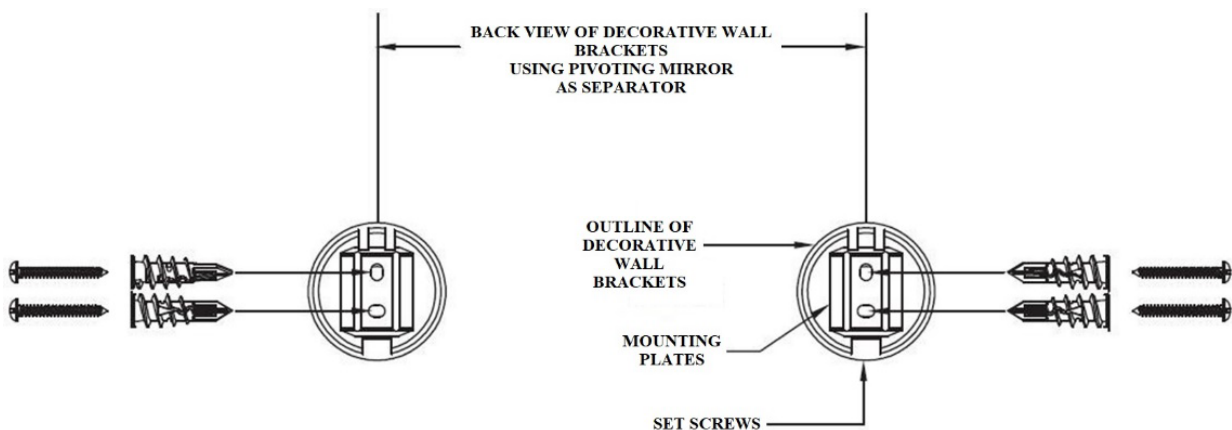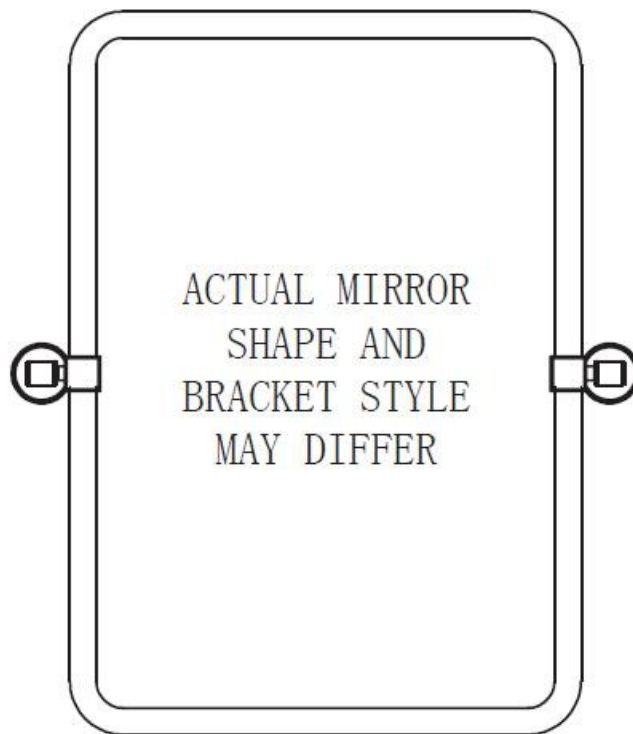

CARE INSTRUCTIONS

To maintain and protect the luster of all products, clean with a soft, damp cloth only.

Important: Do not hang objects, such as towels, from the installed mirror.