
Williams-Sonoma Inc.

Pottery Barn – Pottery Barn Teen – Pottery Barn Kids – Williams Sonoma Home – West Elm – Rejuvenation – Mark and Graham

28-JUNE-2021 1/3

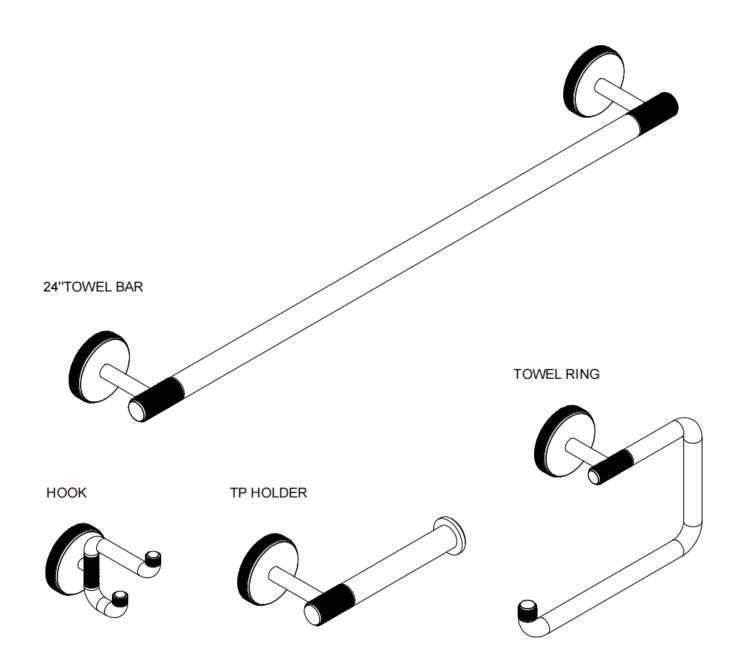

TRASK BATH HARDWARE

Assembly Instructions Instructions d'assemblage Instrucciones de Ensamblaje

Williams-Sonoma Inc.

Pottery Barn - Pottery Barn Teen - Pottery Barn Kids - Williams Sonoma Home - West Elm - Rejuvenation - Mark and Graham

28-JUNE-2021 2/3

CALIFORNIA PROPOSITION 65 WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

PARTS INCLUDED

Hook /Towel Ring/ Toilet Paper Holder

- ●1pc M5*8mm set screw
- •2pcs φ12.5X40mm dry wall Anchors
- 1pc Mounting bracket
- •2pcs φ4X40mm mounting screws
- ●1pc Allen key

24" Towel Bar:

- ●2pcs M5*8mm set screws
- •4pcs φ12.5X40mm dry wall Anchors
- 2pcs Mounting brackets
- 4pcs φ4X40mm mounting screws
- ●1pc Allen key

MOUNTING INSTRUCTIONS FOR TYPICAL DRYWALL APPLICATIONS

Note: Consult your local hardware store for proper mounting to other wall materials.

Tools Required: Phillips and slotted screwdriver, Pencil.

Hook/Toilet Paper Holder/Towel Ring:

- 1. Determine the desired location.
- 2. Mark the location for mounting screws.
- 3. Use a Phillips screwdriver to insert the wall anchors. Do not "push" or drive the anchors into the wall, it is designed to bore into the wall like a screw. Slowly turn the anchors clockwise while applying pressure until the flange just touches the wall.
- 4. Use the two supplied screws to secure mounting bracket to wall.
- 5. Slide the product over bracket and secure it with the set screw using the supplied Allen Key.

24" Towel Bar:

- 1. Determine the desired location.
- 2. Mark the location for mounting screws.
- 3. Use a Phillips screwdriver to insert the wall anchors. Do not "push" or drive the anchors into the wall, it is designed to bore into the wall like a screw. Slowly turn the anchors clockwise while applying pressure until the flange just touches the wall.
- 4. Use the supplied screws to secure mounting bracket to wall. Turn mounting screws clockwise just until you feel resistance.
- 5. Determine the location for the second mounting bracket using a tape measure and level. Repeat Step 2 and 3.
- 6. Use the supplied screws to secure mounting brackets to wall. Turn mounting screws clockwise just until you feel resistance.
- 7. Slide Towel Bar over brackets and secure it with the set screws using the supplied Allen Key.

Williams-Sonoma Inc.

Pottery Barn – Pottery Barn Teen – Pottery Barn Kids – Williams Sonoma Home – West Elm – Rejuvenation – Mark and Graham

28-JUNE-2021 3/3

CLEANING INSTRUCTIONS

- 1. Dust often using a clean, soft, dry and lint-free cloth.
- 2. Blot spills and wipe with a clean, damp cloth immediately.
- 3. We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- 4. Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary

