

YAQUINA FLOATING MIRROR ASSEMBLY INSTRUCTIONS

PARTS INCLUDED:

Frameless Mirror 1 pc.
Mounting Screws 4 pc

Mounting Brackets 2 pc.
Finish Cap threaded insert 4 pc



Drywall Anchors 4 pc
Finish Cap 4 pc

Allen Wrench 1 pc

MOUNTING INSTRUCTIONS FOR TYPICAL DRYWALL APPLICATIONS

Note: Consult your local hardware store for proper mounting on other wall materials.

1. Carefully determine the mounting location and mark the center point on the wall.
2. Apply a piece of blue painter's tape to both mounting brackets and mark the center point of each bracket.
3. Align the center point of the bottom bracket with the center point previously marked on the wall. With a pencil trace the location of one of the mounting holes.
4. Use a small level to assure that the bracket is level and mark the second hole.
5. At each mark, press tip of drywall anchor into drywall using #2 Phillips screwdriver or screw gun with #2 Phillips bit. Drive anchor clockwise until anchor stops flush with wall.
6. Slip the mounting screws over the Finish Cap threaded insert and temporarily install the bottom bracket.
7. Carefully place the mirror into the bottom bracket channel and center.
8. Slide the top bracket into place and center. Mark the location of the mounting holes on the wall. Follow step 5 for installing anchors.
9. Remove the bottom bracket from the wall. Install both top and bottom brackets on the mirror, securing snugly with the set screws on the back of the bracket.
10. With the aid of a helper, install mirror with brackets securely to the wall, remembering to install Finish Cap threaded inserts.
11. Screw the Finish Caps over the Finish Cap inserts.

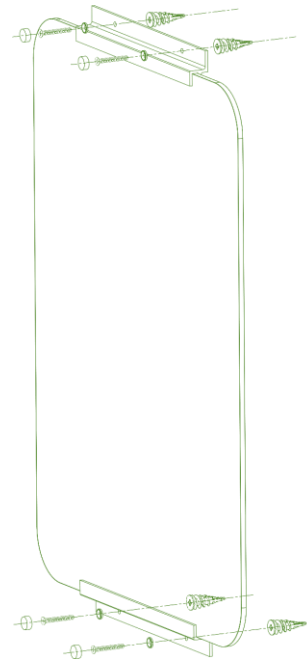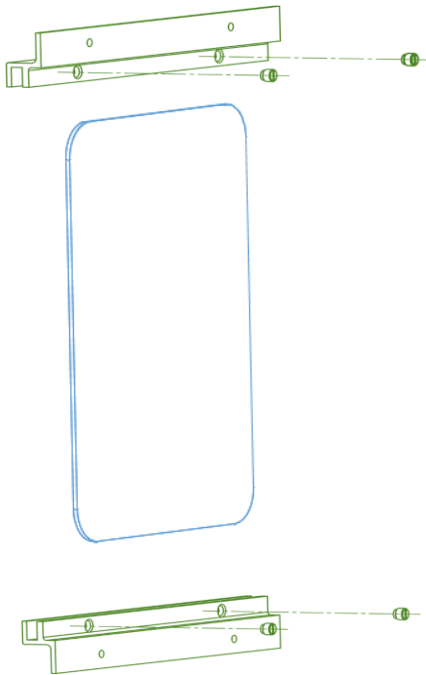

CARE INSTRUCTIONS

Wipe with a soft, dry cloth. To protect the finish, do not use harsh household cleaners or abrasives.

CALIFORNIA PROPOSITION 65 WARNING: This product contains brass hardware components which contain lead, a heavy metal known by the State of California to cause cancer, birth defects, or other reproductive harm.