

REJUVENATION®

2" Cabinet Hinge Installation Instructions

This package includes hardware that is designed to mount securely to cabinets where the doors sit flush with the face frame.

PARTS INCLUDED


- 2pc 2" Cabinet Hinges
- 8pc wood screws

MOUNTING INSTRUCTIONS

1. Carefully determine the desired hinge locations. Mark the locations for the hinges and use a chisel or router to create a mortise 1/16" deep on both the door and face frame.
2. Place the hinge into your mortise and mark the locations for the hinge screws ***You Must Drill Pilot Holes to Prevent Screws From Breaking.***
3. Making sure the removable hinge pin is oriented up, attach the hinges using a screwdriver, being careful not to let the screwdriver strip the screws or scratch the finish. Do not over tighten. A small amount of wax or bar soap on the screw threads will ease installation. **Do not attempt to drive screws with a power drill/driver (solid brass screws will break off).**

CARE INSTRUCTIONS

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.

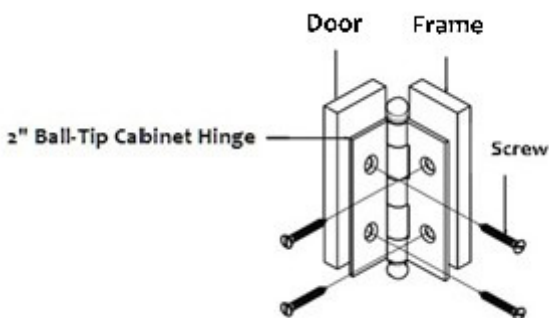

2550 N.W. Nicolai Street, Portland Oregon 97210
Customer Service: 888 401-1900 rejuvenation.com