Screw Collar Canopy Fixtures

skill level | basic electrician

installation instructions




6 – jamb nut

canopy

collar fitting

- 1. Remove crossbar from assembly and attach crossbar to electrical box.
- 2. Loosen collar and slide canopy and collar down rod or chain.
- 3. Feed wires through center hole of crossbar.

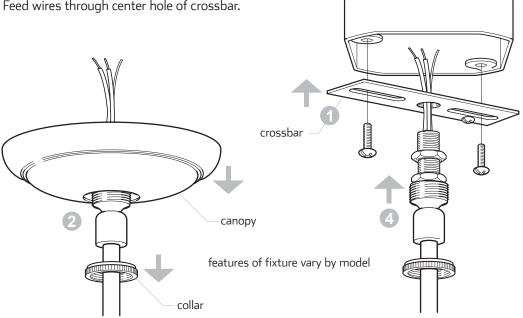

- 4. Screw threaded pipe loosely into crossbar.
- 5. Check fit of canopy by placing it snug against ceiling. Adjust depth of assembly so that collar fitting extends beyond bottom of canopy by 1/4".
- 6. Tighten jamb nut upward against crossbar to lock assembly in position.
- 7. Make wiring connections in accordance with local electrical codes. See "Important Information" on reverse side.
- 8. Slide canopy up against ceiling and secure with collar.





