


 **WARNING:** This product can expose you to chemicals including lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information, go to: www.P65warnings.ca.gov

 **AVERTISSEMENT:** Ce produit peut vous exposer à des produits chimiques, y compris le plomb, qui est reconnu par l'État de Californie comme causant le cancer et des malformations congénitales ou d'autres troubles de la reproduction. Pour plus d'informations, visitez: www.P65warnings.ca.gov

 **ADVERTENCIA:** Este producto puede exponerlo a productos químicos, incluido el plomo, que el estado de California sabe que causan cáncer y defectos de nacimiento u otros daños reproductivos. Para obtener más información, visite: www.P65warnings.ca.gov

Laundry Rod Wall-Mount – Mounting Instructions

(Rod length up to 88" Max Weight Capacity: 40 lbs)

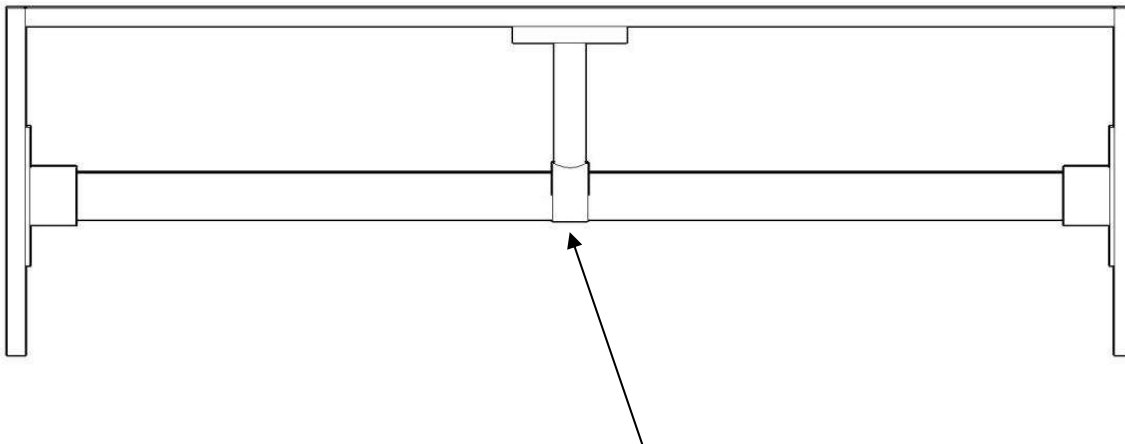

Note: Center Bracket only included for lengths 48in and greater, under-shelf applications only.
Remarque : le support central est uniquement inclus pour les longueurs de 48 pouces et plus, pour les applications sous étagère uniquement.
Nota: El soporte central solo se incluye para longitudes de 48 pulgadas y mayores, solo para aplicaciones debajo del estante.






Williams-Sonoma Inc.

Assembly Instructions
Instructions d'assemblage
Instrucciones de Ensamblaje

PotteryBarn— Pottery Barn Teen —Pottery Barn Kids— Williams Sonoma Home— West Elm—Rejuvenation—Mark and Graham- Green Row


05-Sep -2023

2/2

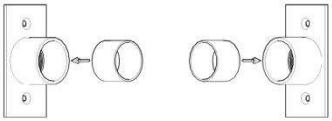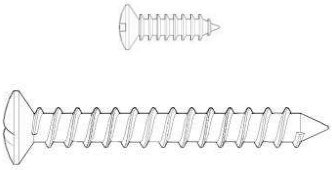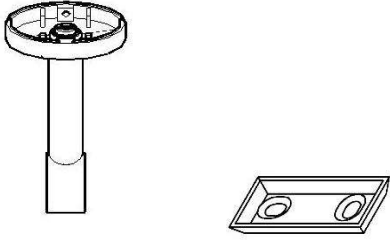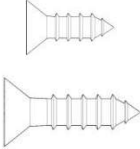
No.	Parts (Image)	Item Name/ Size	Qty.
1		Rod – Tube 1Inch Dia x Selected Custom Size	1
2	 [SLEEVE PRE INSERTED]	End BracketsWith Rubber Sleeve Insert – Wall Mount 1 Inch x 3 Inch x 1.5 Inch	2
3		Twist – N - Lock Anchor	4 (for Wall Applications Only)
4		Oval Head Slotted Wood Screw – #8-32 0.5 Inch L(For Cabinet Applications Only) Oval Head Slotted Wood Screw – #8-32 1.2 Inch L(For Wall Applications Only)	6 (additional screws included) 6 (additional screws included)
5		*Center Bracket With Mounting Plate– Undermount 1 Inch x 4.13 Inch	1*
6		*Flat Head Phillips Wood Screw – #8-32 0.5 Inch L *Flat Head Phillips Wood Screw – #8-32 0.625 Inch L	2* 2*

*Only included with rod lengths 48in or greater, under-shelf applications only

STEP 1 – Fit end brackets with nylon sleeve onto rod WITHOUT installing. Hold up brackets & rod to desired install location and mark bracket mounting holes with a pencil. Use a carpenter's level to ensure the brackets will be level. **NOTE: If using a center bracket, note the length of your center bracket to ensure the rod aligns with the wall brackets.**

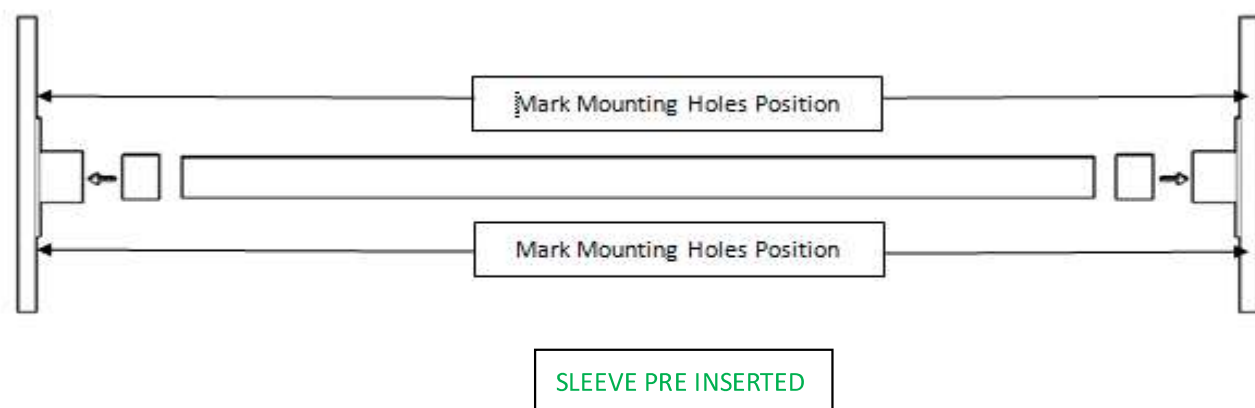


STEP 2 – Pre-drill pilot holes using a 3/16 inch [5mm] diameter drill bit. Remove threaded cap from brackets and install flat bracket plate to wall.

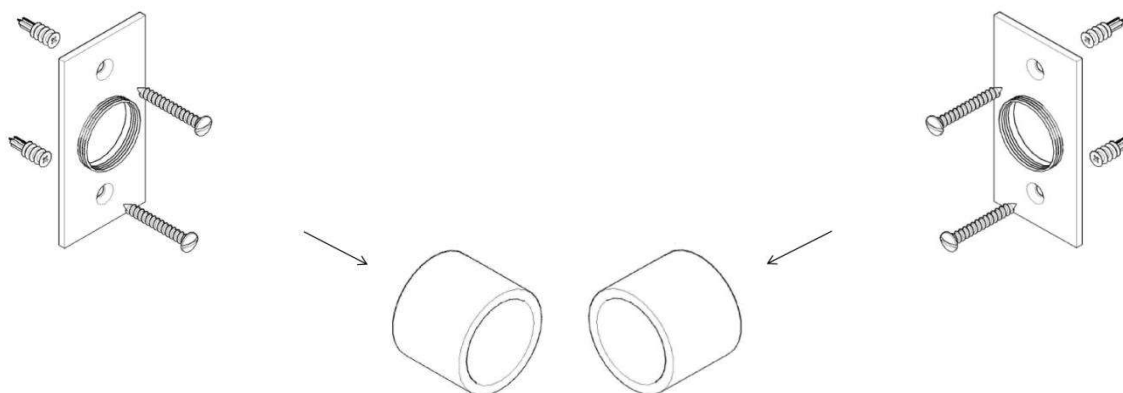

05-Sep -2023

4/2


STEP 3 – (IF USING A CENTER BRACKET, UNDER-SHELF APPLICATIONS ONLY) Slide center bracket onto rod and mark Hole position through pencil with use of wall plate, and directly affix plate with self tapping screw. Install center bracket at desired location and tighten set screw at base.

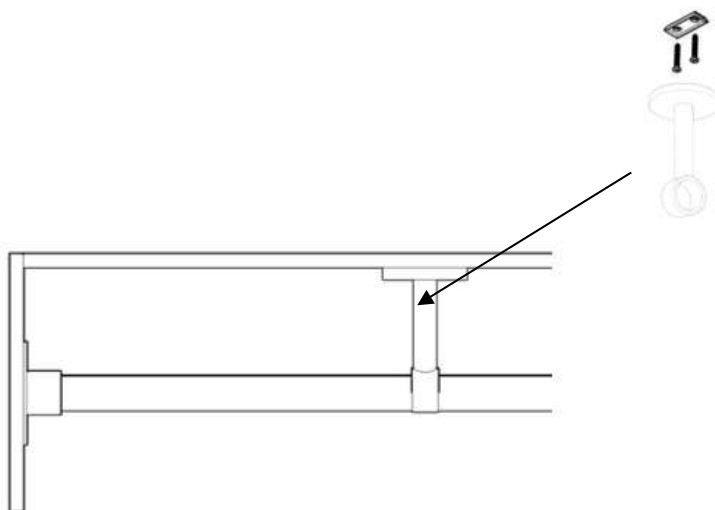

STEP 4 – Attach threaded caps onto both ends of rod. Hold rod up to installed bracket plates and turn end caps until product is firmly adhered to wall.



STEP 1 – Fit end brackets with nylon sleeve onto rod WITHOUT installing. Hold up brackets & rod to desired install location and mark bracket mounting holes on WALL and CABINET with a pencil. Use a carpenter's level to ensure the brackets will be level.

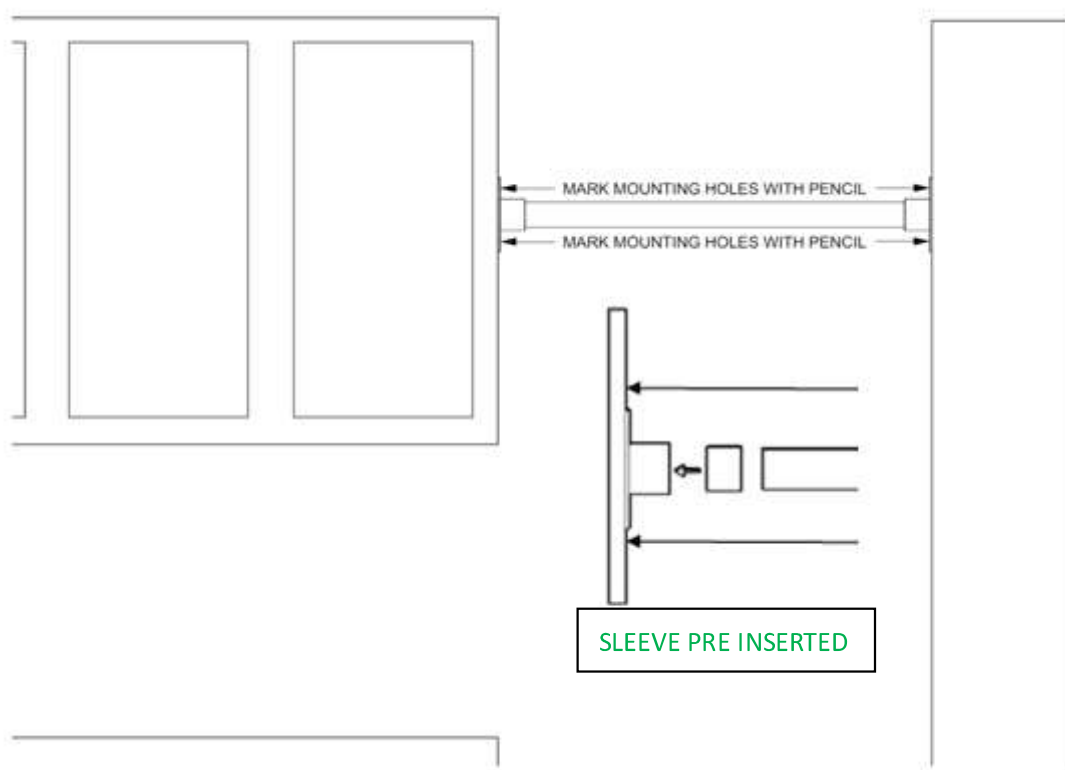

Williams-Sonoma Inc.


Assembly Instructions
Instructions d'assemblage
Instrucciones de Ensamblaje

PotteryBarn— Pottery Barn Teen —Pottery Barn Kids— Williams Sonoma Home— West Elm—Rejuvenation—Mark and Graham- Green Row


05-Sep -2023

6/2

STEP 2 —MEASURE CABINET WALL THICKNESS and select appropriate screw length before drilling pilot holes.

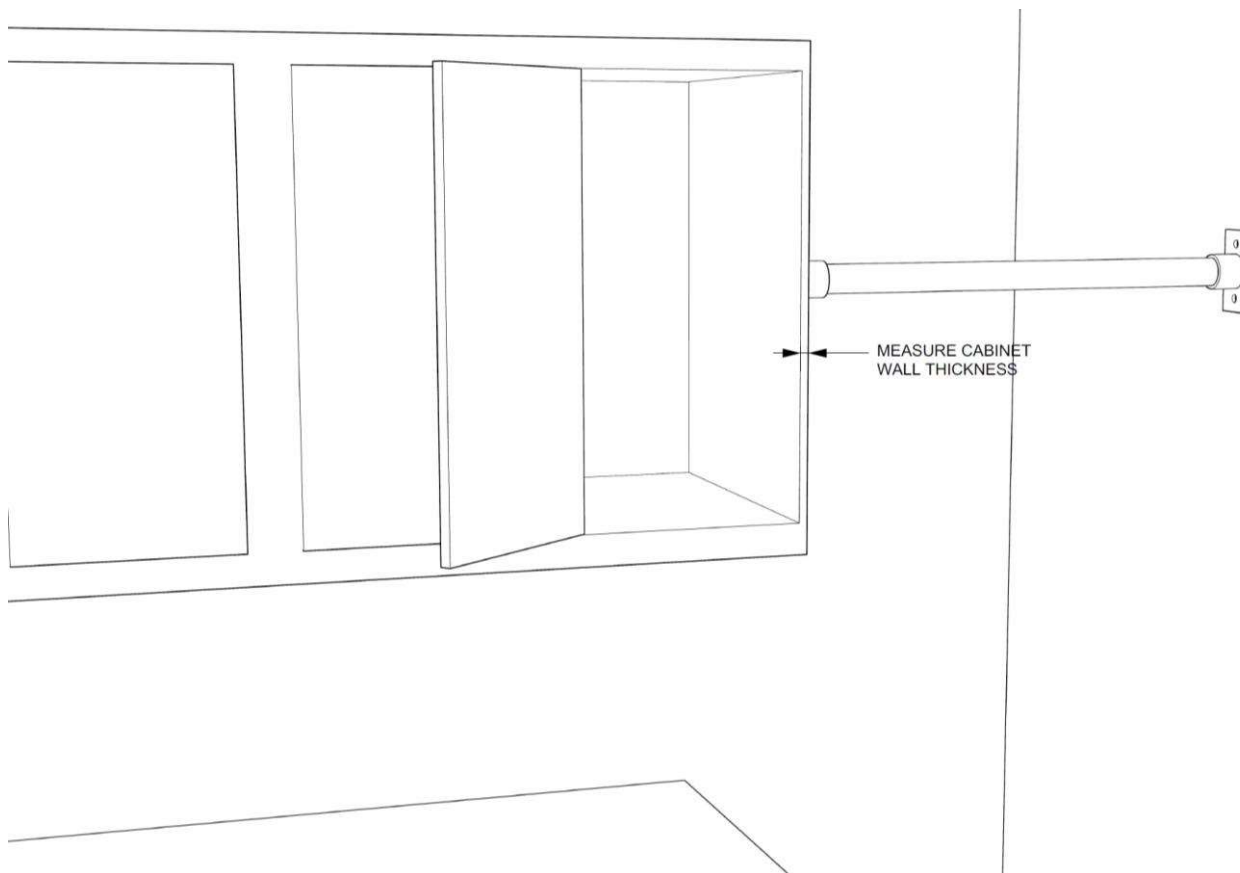


STEP 3—Pre-drill pilot holes using a 3/16 inch [5mm] diameter drill bit 1.2 "Ldeep into cabinet and wall. Remove threaded cap from brackets and install flat bracket plates.**Note that 1.2" L screws should be used on wall applications only.**

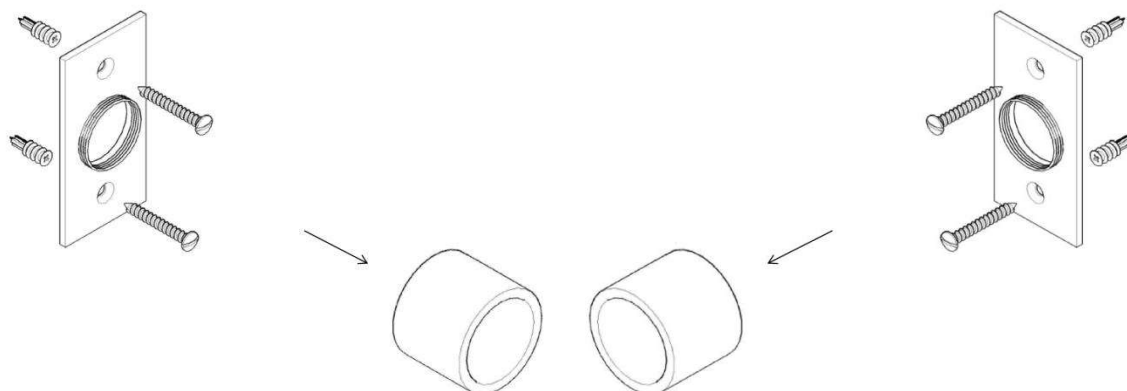

05-Sep -2023

7/2

STEP 3 – (IF USING A CENTER BRACKET, UNDER-SHELF APPLICATIONS ONLY)) Slide center bracket onto rod and mark Hole position through pencil with use of wall plate, and directly affix plate & self tapping screw with the help of surface. Now Install center bracket at desired location and tighten set screw at base.

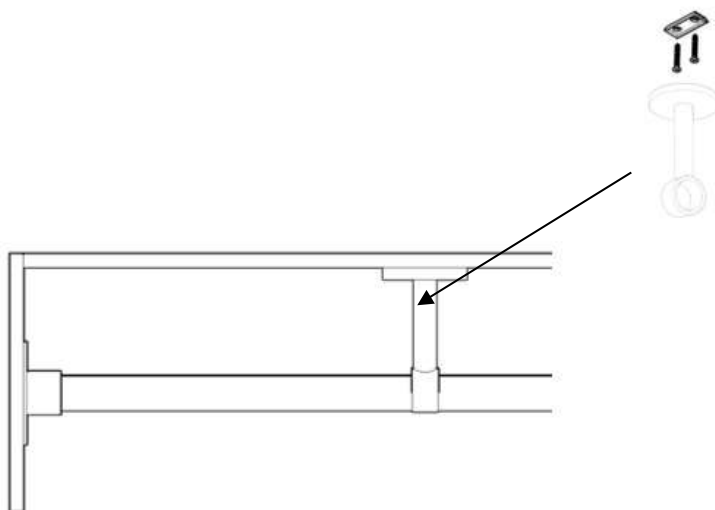

STEP 4 – Attach threaded caps onto both ends of rod. Hold rod up to installed bracket plates and turn end caps until product is firmly adhered to cabinet and wall.



Williams-Sonoma Inc.

Assembly Instructions
Instructions d'assemblage
Instrucciones de Ensamblaje

PotteryBarn— Pottery Barn Teen —Pottery Barn Kids— Williams Sonoma Home— West Elm—Rejuvenation—Mark and Graham- Green Row

05-Sep -2023

8/2

CARE INSTRUCTIONS:

1. Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.

INSTRUCTIONS D'ENTRETIEN:

1. Essuyez avec un chiffon doux et sec. Pour protéger la finition, n'utilisez pas de nettoyeurs ménagers ou abrasifs.

INSTRUCCIONES DE CUIDADO:

1. Limpie con un paño suave y seco. Para proteger el acabado, no use limpiadores domésticos ni abrasivos.