


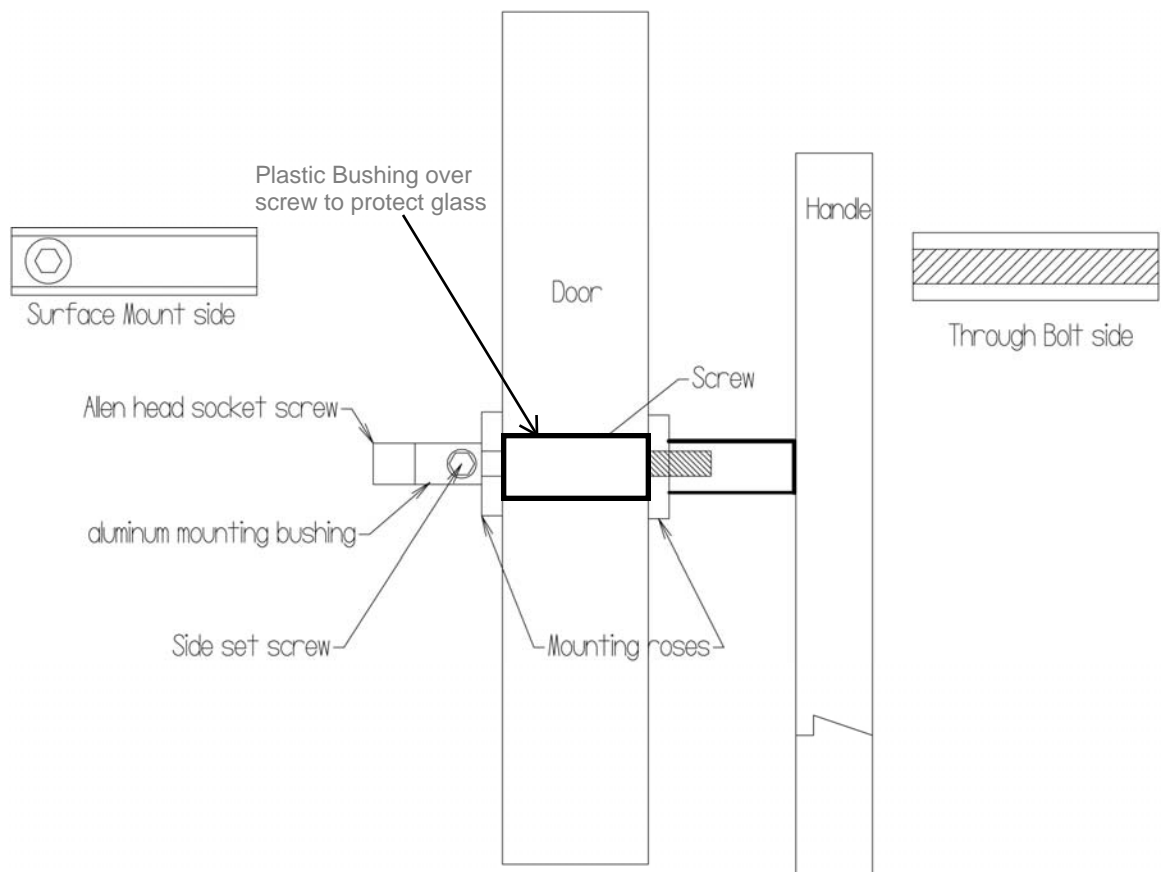

## **Back to Back Mounting Instructions**

1. Place aluminum bushing onto socket head screw.
2. Slide plastic tubing over exposed screw to protect glass
3. Add Mounting Rose so that the countersunk side is adjacent to the aluminum bushing
4. Slide the screw with the bushing and rose through the door
5. Add another mounting rose with the flat side against the door, countersunk side facing out
6. Start threading the complete assembly into the post of the handle on the opposite side of the door – do not completely tighten the assembly at this point
7. Repeat steps 1-4 with other leg of the handle of the through-bolt side of the handle set
8. Completely tighten both socket head screws. You should now have a completely installed handle on one side and a mounting rose with a post and bushing on the opposite side of the door.



- Place both ends of the Surface Mount side of the pull over the two posts protruding from the face of the door, making sure that the pulls seat firmly to the bottom of the countersunk mounting rose. Keeping the pull tight to the surface of the mounting rose, tighten the side set screw very firmly to insure a secure mount. The stainless steel set screw with bite into the aluminum bushing inside the leg of the handle. The completed assembly will look like this:

