

REJUVENATION


Installation Instructions for FREDRICK POCKET DOOR 5ET

Case Size: 3-13/32" x 6" x 11/16" (86.5mm x 152mm x 17mm)

Backset: 2-1/2" (63.5mm)

Lock Front: 1" x 8" x 15/64" (25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

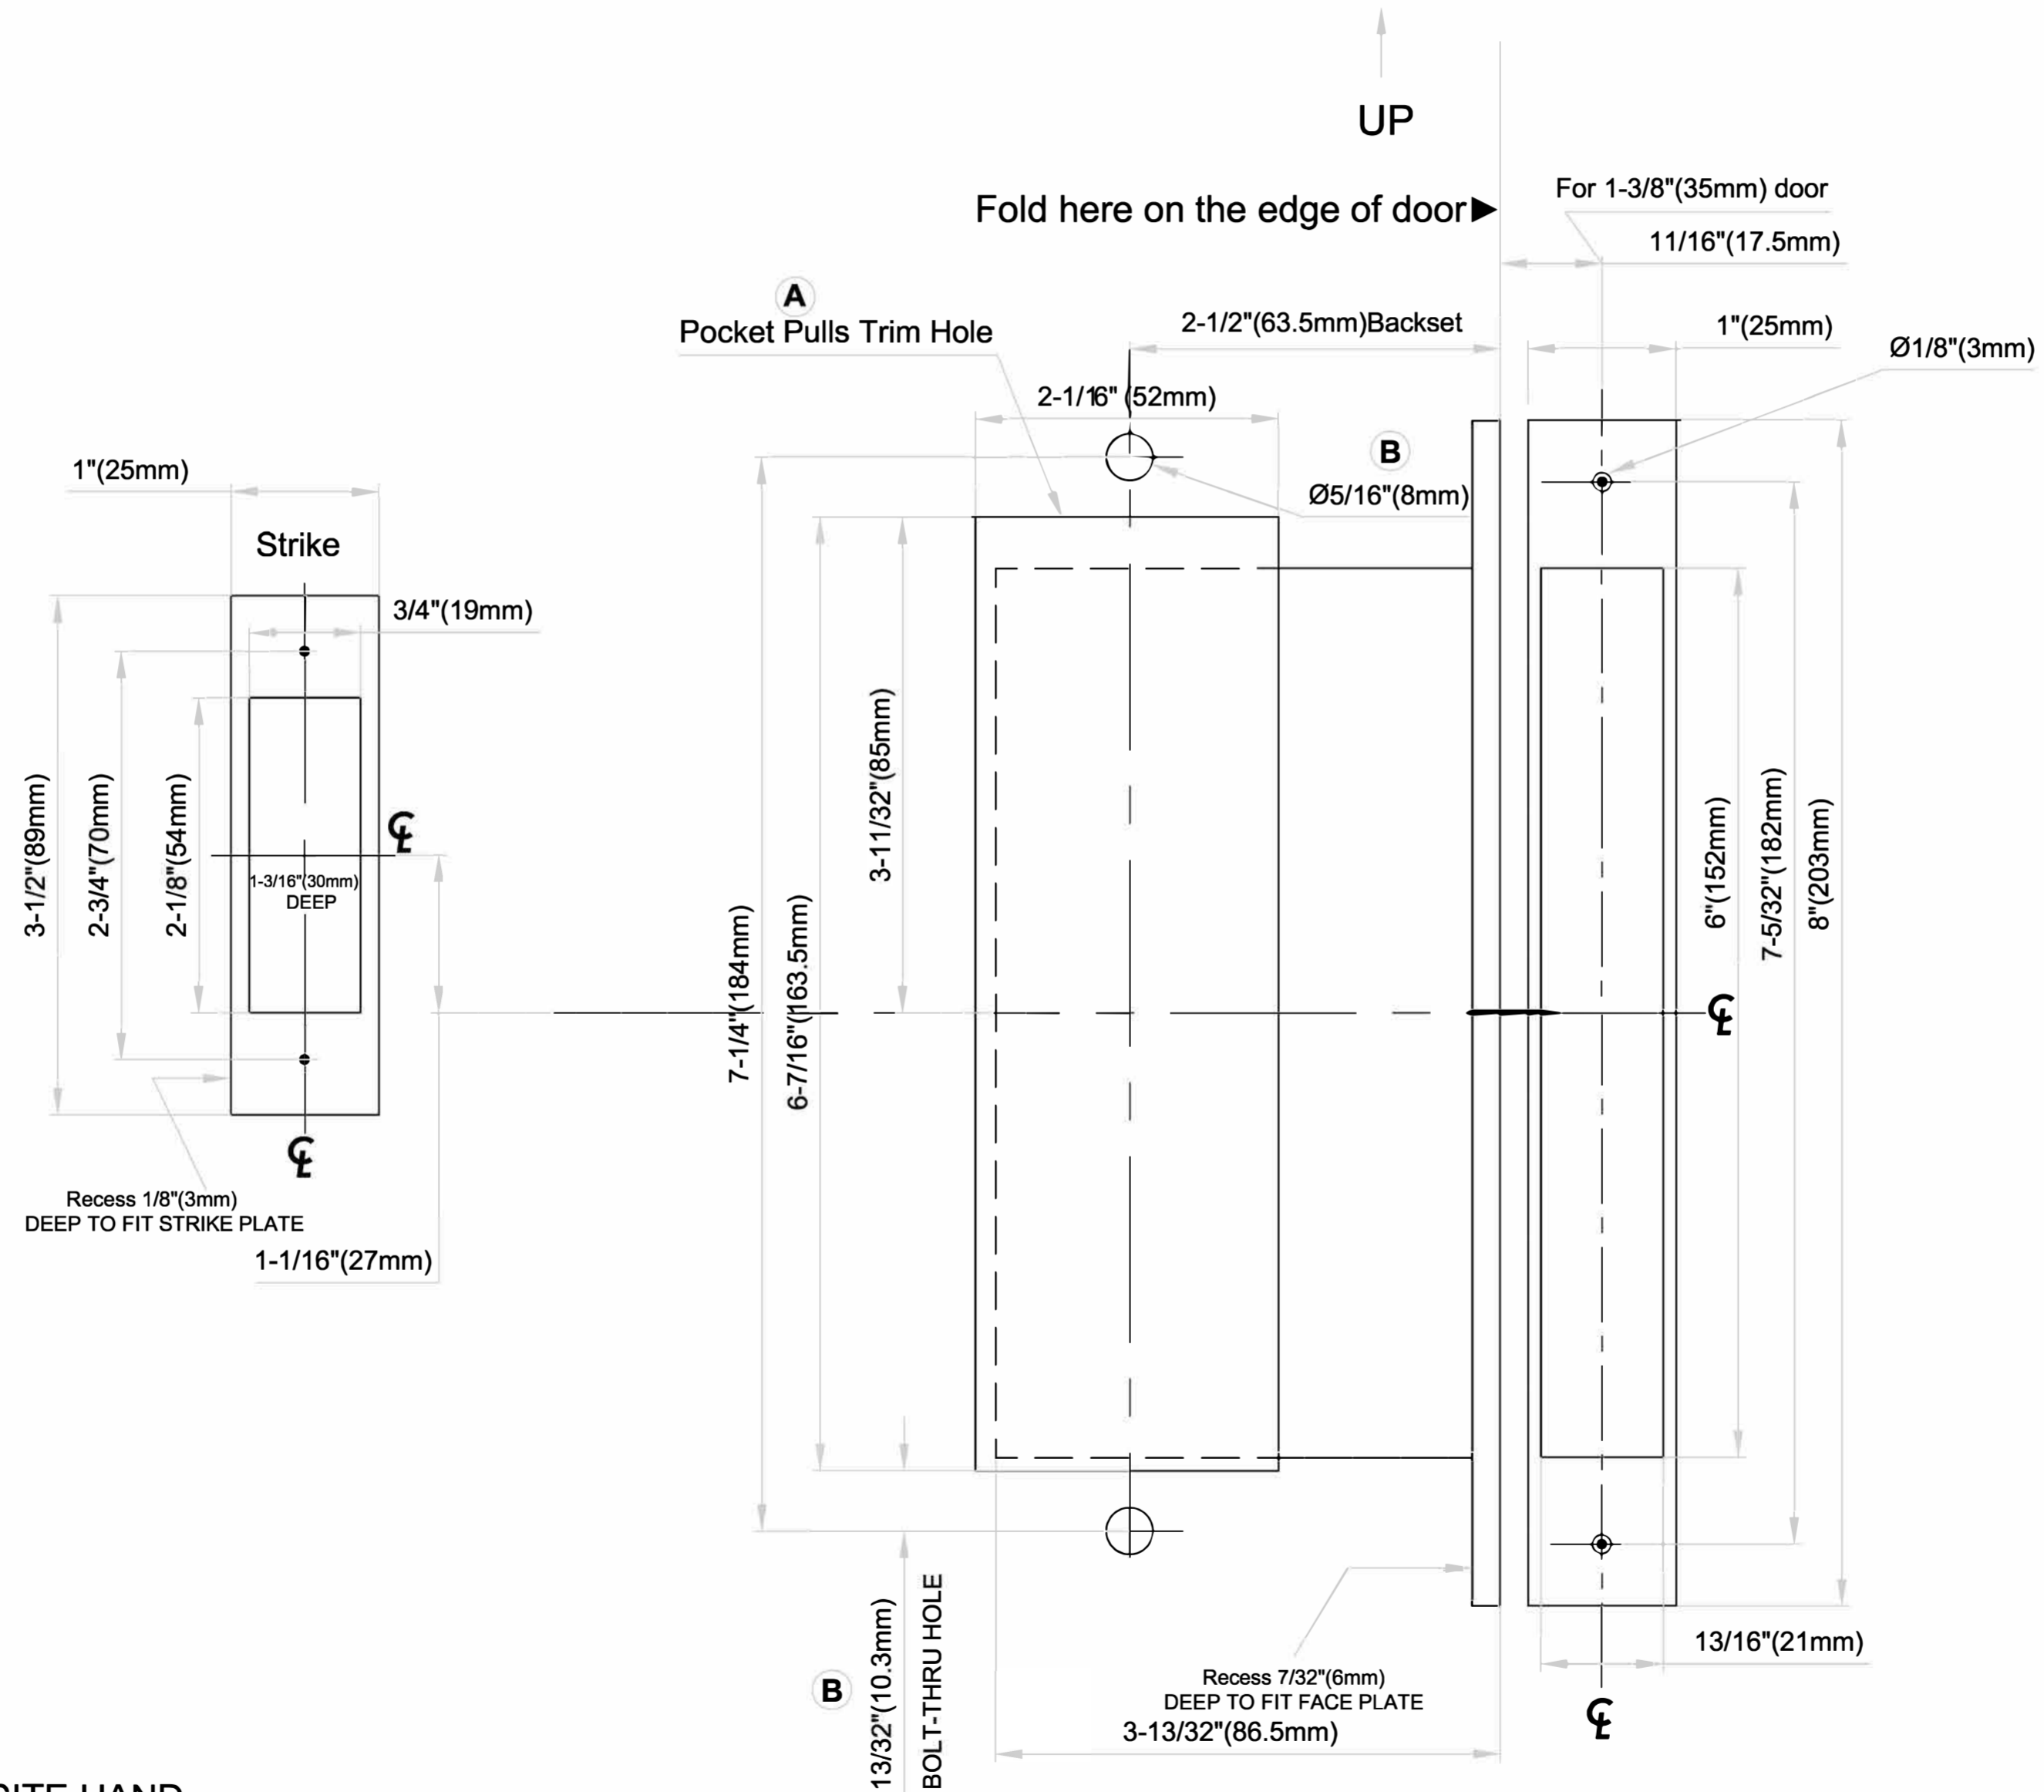

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Match With Vertical Line Drawn On Door

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

REJUVENATION


Installation Instructions for FREDRICK POCKET DOOR SET

Case Size: 3-13/32" x 6" x 11/16" (86.5mm x 152mm x 17mm)

Backset: 2-1/2" (63.5mm)

Lock Front: 1" x 8" x 15/64" (25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

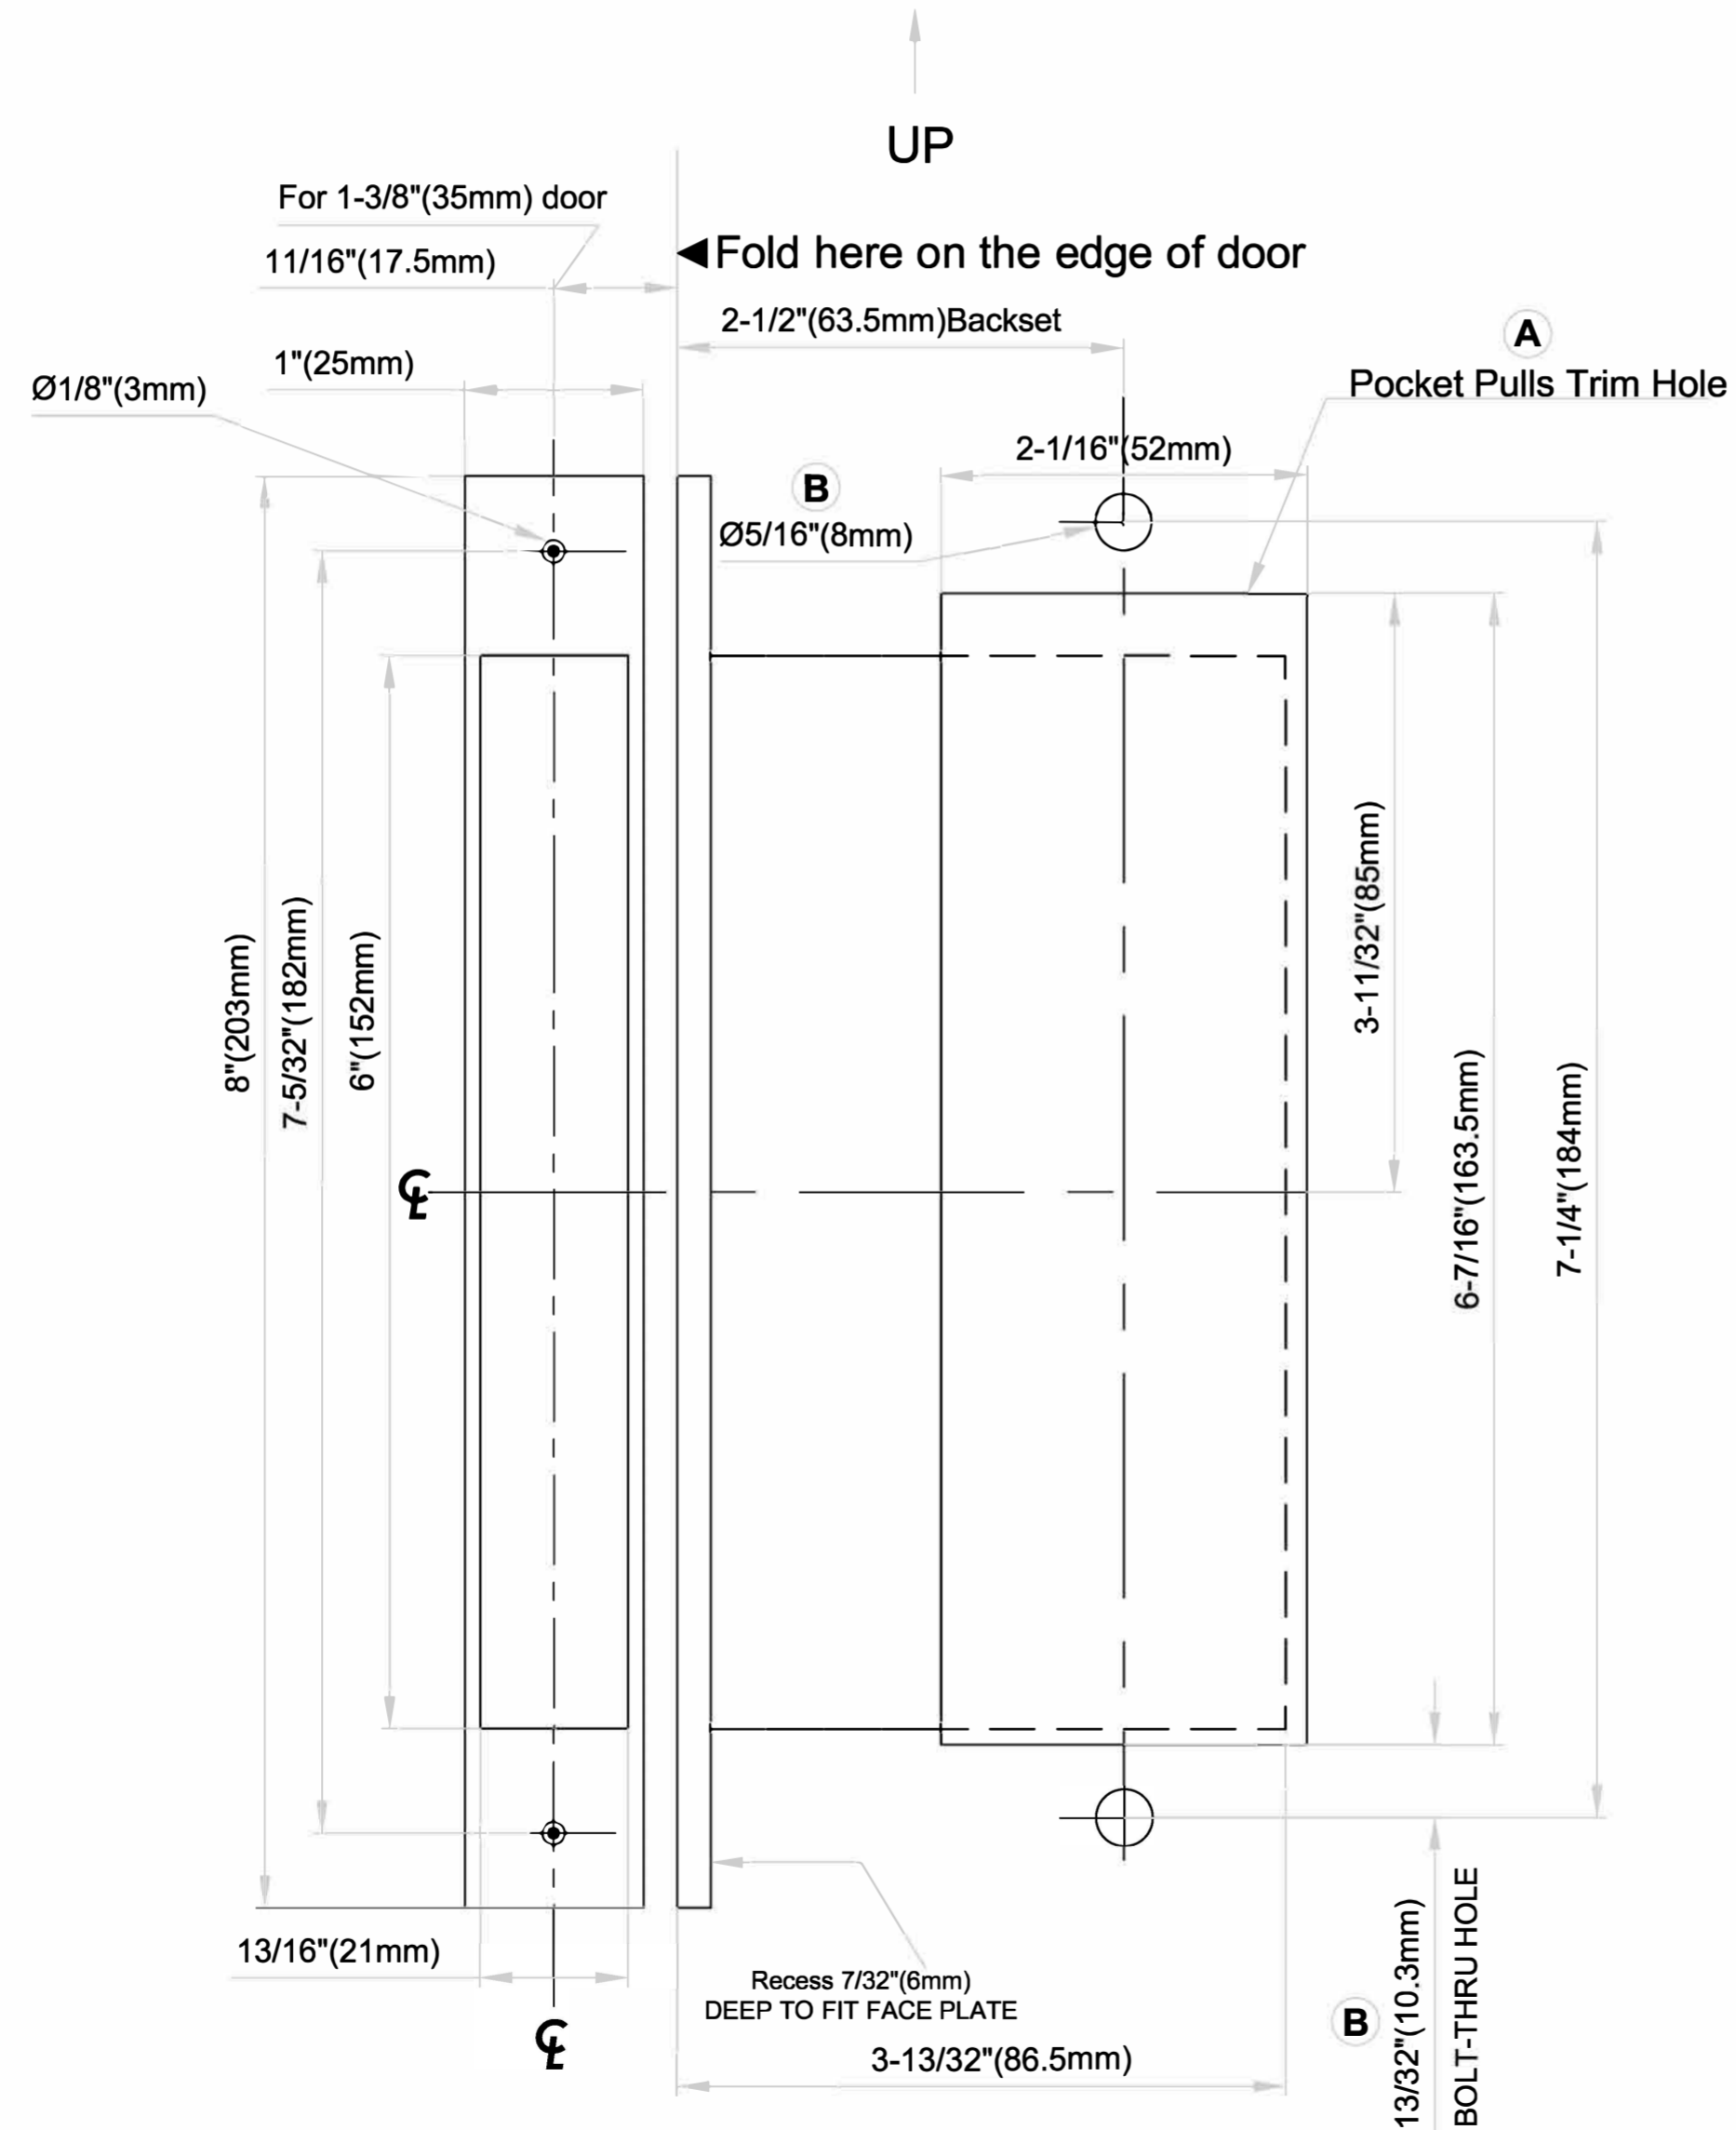

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.