

Willamette Double Tier Chandelier

skill level ● handy persons

installation instructions

1. Feed wires from lower fixture assembly up through **tube assembly** and out center hole of **crossbar**.
2. Thread bottom of **tube assembly** into **coupling** until it stops. Using provided allen wrench, tighten upper **set screw**.
3. Remove **crossbar** and ensure **canopy** is positioned between **crossbar** and **collar** (as shown in **Figure A**) before moving on to fixture installation according to separate sheet, "[Screw Collar Canopy Fixture for Heavy Fixtures.](#)"
4. Assemble both sets of glass (upper and lower) according to separate sheet titled "**Three Piece Round Glass Shade.**"
5. You will install the inner/lower glass shade assembly to the fixture first. Locate the 3 **bent rods** with **knurled nut** on one end and **ball** on other end, as well as 3 spare **knurled nuts**. Remove **ball** from ends from bent rod, insert **bent rod** into **hanger bracket**, and reinstall **ball** ends firmly.
6. It is now time to lift and install the inner/lower shade assembly to the **center hub**. With (2-3) people lift the inner/lower shade assembly and **bent rods** under, then up and around the fixture sockets until exposed thread end of **bent rods** can slip into 3 mating holes on **center hub** (see **Figure B**). Using 3 upper **knurled nuts**, fully hand tighten all 3 rod assemblies to hub.
NOTE: You can fine tune the horizontal level of the inner/lower glass by partially loosening one or two of these upper knurled nuts
7. It is now time to install the outer/upper glass shade assembly using separate sheet, "**Suspended Ball End instructions.**"

See "Important Information" on reverse side.

Complete !

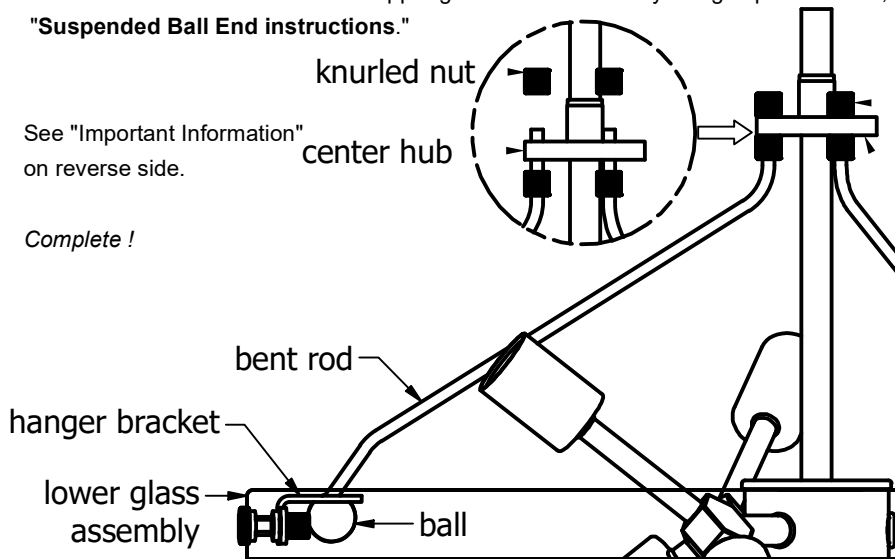


Figure B

REJUVENATION

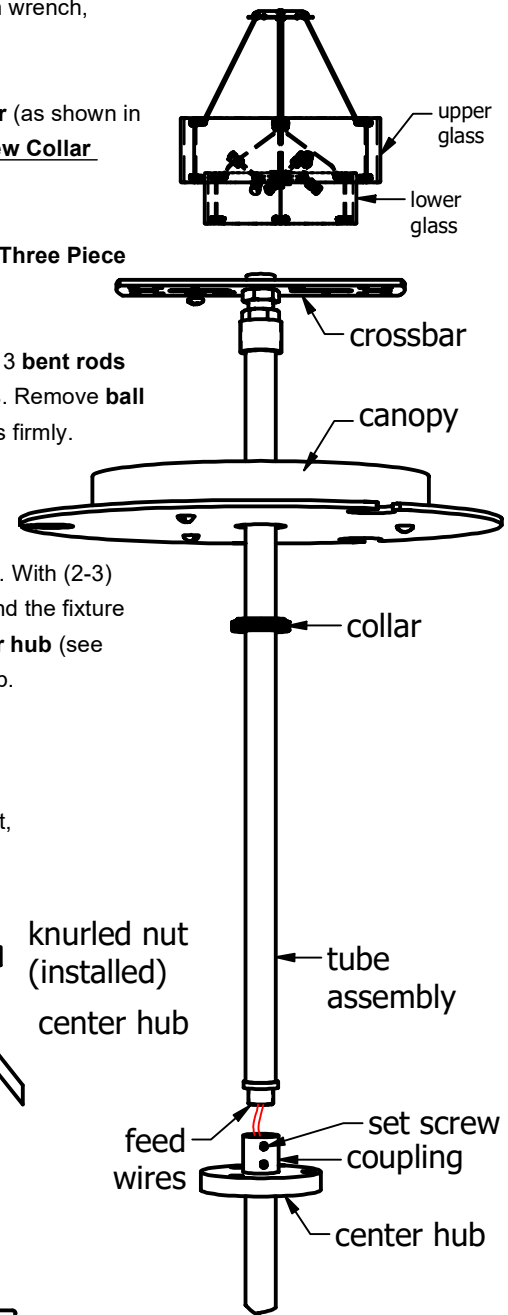
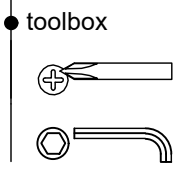


Figure A