


PARTS INCLUDED:

Mounting Brackets 1 pair

Brass Rod 1 pc

#6 x 1" Round Head Brass Wood Screw 4 pc

● toolbox

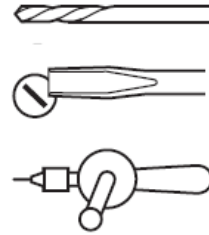

Please note: Stair rods are designed to be installed on wood stairs. Please consult your local independent hardware store for anchoring to other materials.

Note: Your stair rods are designed to sit 1/4" past your runner.

1. Begin by loosely fitting a rod into the two brackets.
2. Place your stair rod assembly onto your stair, adjusting so that there is equal distance between the inner brackets and runner.
3. Using a pencil, mark the location for the screws for each bracket. Carefully set the stair rod assembly aside.
4. Using a 7/64" drill bit, drill pilot holes at least 1" deep. Please note: the supplied brass screws will break if the correct pilot holes are not drilled. Using a #6 steel screw (supplied by others) to first "tap" the screw holes will ease installation.
5. Return the assembled stair rod set to the location of you pilot holes and secure with supplied screws.

