

Rigdon sconce instructions

skill level

• basic electrician

installation instructions

• toolbox



Install the fixture:

1. Remove crossbar from assembly and attach crossbar to electrical box.
When mounting, align the threaded canopy mounting holes vertical if you want the light to be vertical or horizontal if you want the light to be horizontal.

Note: Ensure there is clearance beyond the mounting surface for the canopy mounting screws to protrude through the backside of the crossbar at least 1/2". Depending on the electrical box shape, the canopy mounting screws may or may not protrude into the box.

2. Hold the fixture close to the crossbar and make wiring connections in accordance with local electrical codes.
See "Important Information" on reverse side.



3. Screw both canopy mounting screws into the threaded canopy mounting holes to secure the fixture to the crossbar.

NOTE: The glass must be removed from the fixture in order to have access to the canopy mounting screws.

Install the glass:

1. Screw the glass into the fixture body while holding up the retaining ring.
Thread the glass until it stops to ensure that the glass sits straight.
2. Lower the retaining ring and thread it into the body until it stops.

NOTE: The fixture gets very hot with incandescent bulbs. Allow time for the glass to cool before handling.

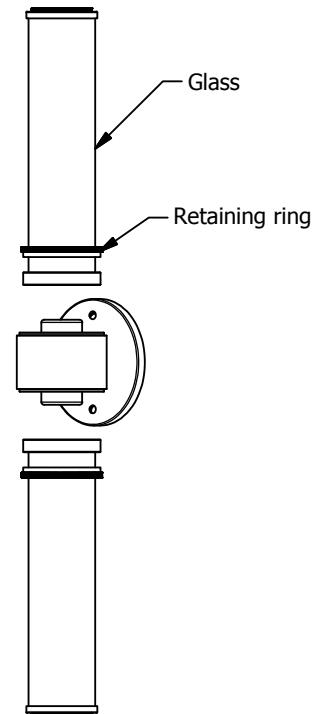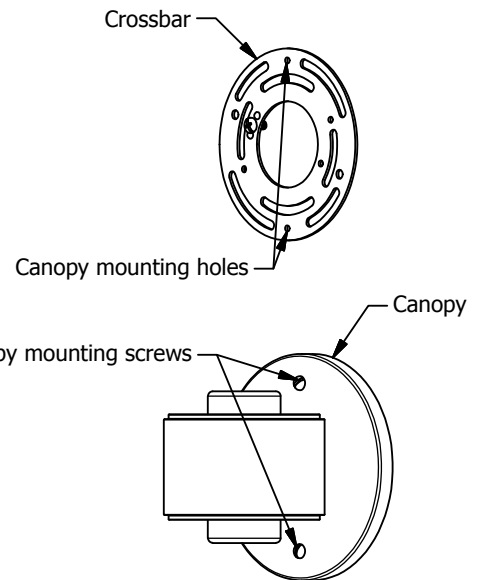

Complete !

REJUVENATION

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com