

Installation Sheet Dekum Pendant


skill level

● basic electrician


installation instructions

Installation of this fixture requires lifting the fixture with the shade installed.


1. Install the **shade** onto the **fitter sub-assembly [A]** as shown.
2. Run the **fixture wires** from [A] through the **downrod+canopy sub-assembly [B]** as shown.
3. Connect [A] to [B] by threading pieces together tightly as shown. If you have an extra downrod sub-assembly included with your fixture, install the extra downrod sub-assembly in between [A] and [B].
4. With all sub-assemblies connected, secure connection(s) by tightening **set screws** in **coupler(s)** using provided **tool**.
5. Follow instructions according to "Screw Collar Canopy Fixtures Installation Instructions" to mount the fixture to ceiling using the crossbar.
6. Make the wiring connections in accordance with local electrical codes. See "Important Information" on reverse side.
7. Once fixture is installed and canopy is in place, flush to ceiling, verify **shade** is still properly seated on **fitter**.

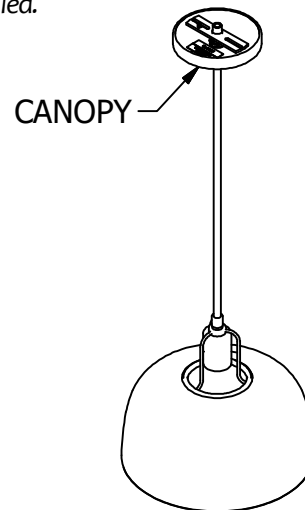

● toolbox

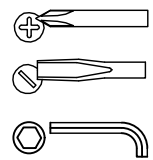

Complete !

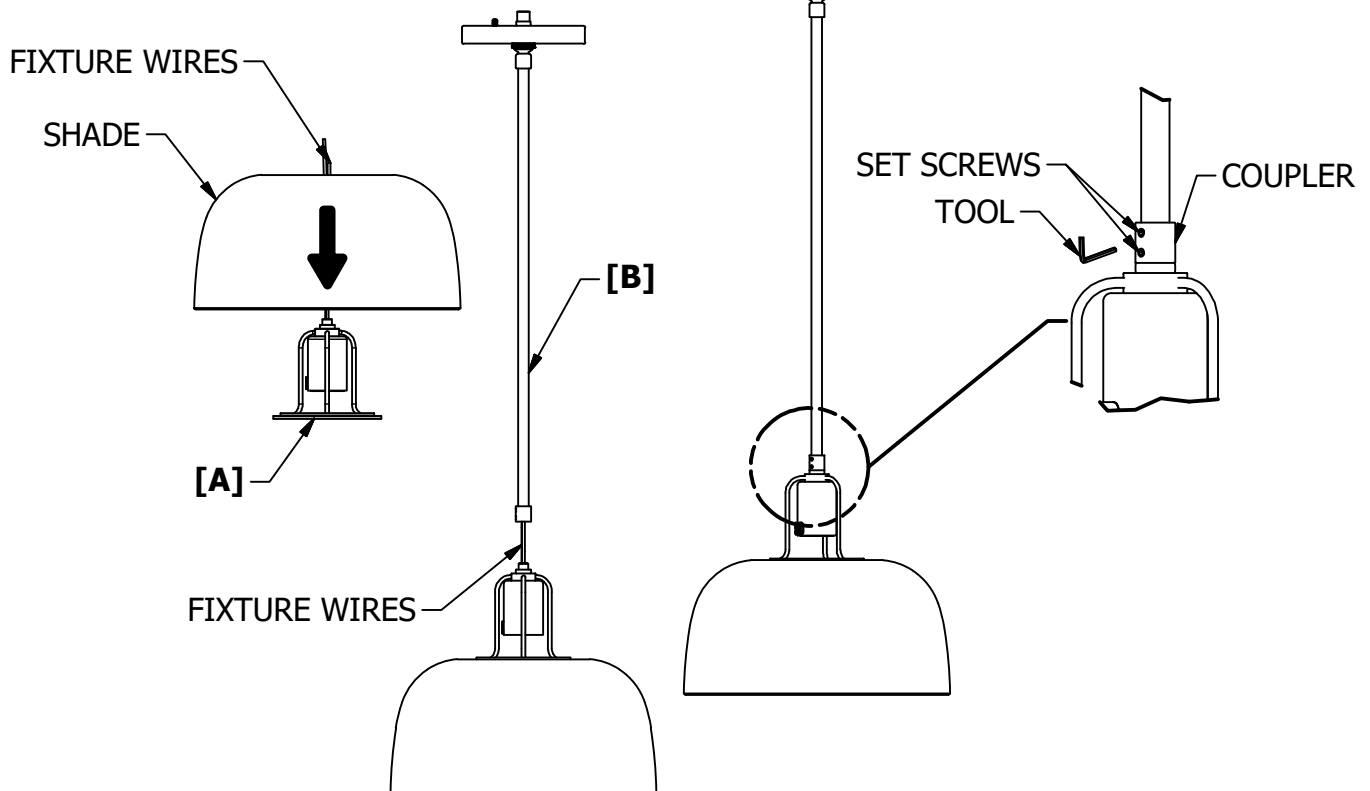

REJUVENATION

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com