## **Globe Pendant**

installation instructions

For a safe installation, make sure the electrical junction box is securely mounted to a structural member.

Shade is HEAVY! 2 people required!

1. Using hex key supplied, fully remove the upper set screw from coupler on shade assembly. Set screw aside, do not discard.

2. Ensure there is at least 1/2" exposed thread on down tube from crossbar assembly.

3. Route wires from shade assembly through down tube of crossbar assembly and thread down tube into coupler. Tighten until down tube is fully bottomed in coupler.

4. Re-install set screw removed in step 1 and fully tighten.

5. Tighten cover tube over down tube on crossbar assembly using nut above canopy. Finger tight only.

6. Loosen set screw on canopy using hex key supplied and slide it down to the socket body. Remove finial nut and set aside.


7. Attach crossbar to electrical junction box using screws supplied with the box.

8. Make wiring connections in accordance with local electrical code.

See "Important Information" on reverse side.

## (Page 1 of 2) basic electrician skill level toolbox ROUTE WIRES FROM SHADE ASSEMBLY. CROSSBAR ASSEMBLY FINGER TIGHTEN NUT AFTER CONNECTING TO LOWER CANOPY **BEFORE ATTACHING** COUPLER. CROSSBAR TO BOX. ស ENSURE AT LEAST 1/2" THREAD EXPOSED BEFORE CONNECTING TO COUPLER. USE HEX KEY TO **REMOVE/TIGHTEN** UPPER SET SCREW IN COUPLER. SHADE ASSEMBLY FINIAL NUT REJUVENATION

## **Globe Pendant**

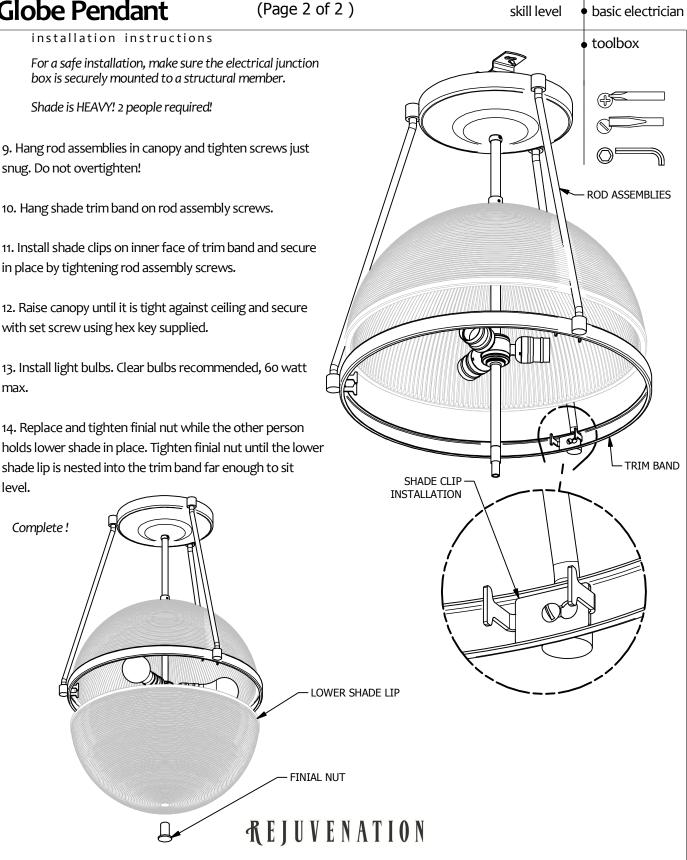

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com