

# Conifer Flush Mount

skill level • basic electrician

## installation instructions

1. Set the fixture to the lowest possible position by threading all three locknuts down the threaded stem until they are stacked above the socket assembly.
2. Attach crossbar to the electrical box using the screws supplied with the box.
3. Run the black and white wires up through the center hole in the crossbar, and thread the fixture into the crossbar by turning the socket assembly clockwise. Continue to turn until threads are just visible from the other side of the crossbar (approximately 1/2").
4. Using a wrench or pliers, tighten the hex nut securely against the underside of the crossbar.
5. Pull the black and white fixture wires out of the electrical box along with the house wires and make the electrical connection in accordance with local electrical codes.


**NOTE- See "Important Information" on reverse side.**

6. Slide the Canopy up until it contacts the ceiling, and secure it in place by turning the top locknut up the threaded stem until it is tight against the underside of the canopy.


7. Install the Shade by running the middle locknut up the threaded stem until there is approximately a 1/2" gap between the top and middle locknuts. Slide the opening of the shade washer into this gap and tighten the middle locknut against the shade washer until the shade is secure. Tighten the lower locknut against the underside of the middle locknut to ensure that your shade is secure.

**NOTE- See "Conifer Shade" Assembly Instructions (included with shade) for a more detailed description of this step.**

## • toolbox

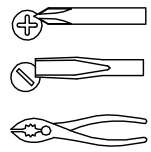

Complete!

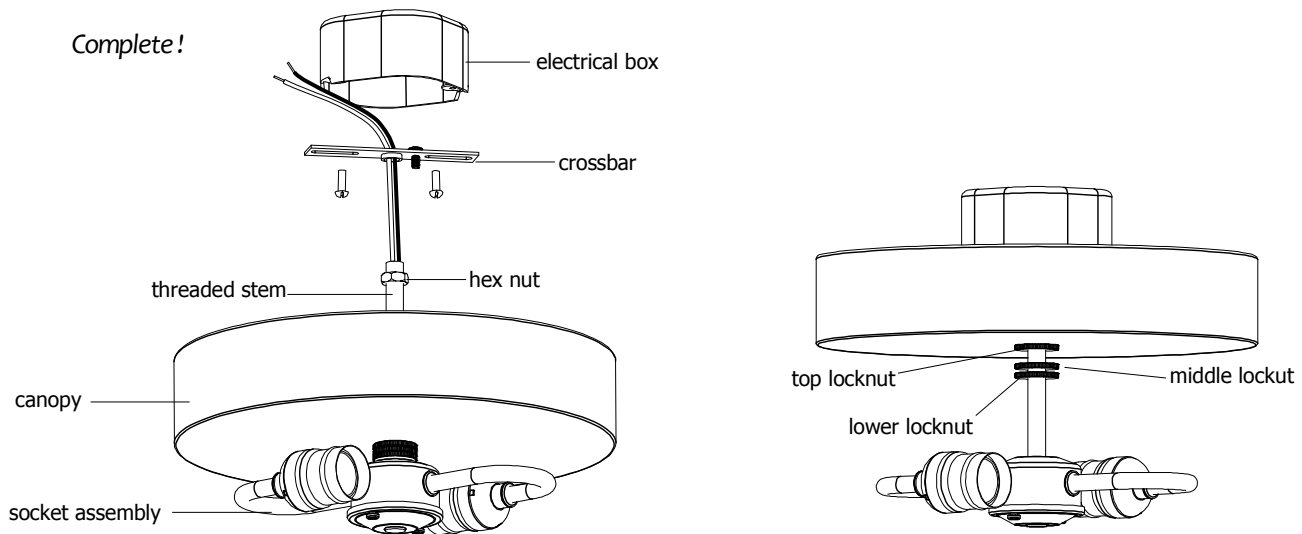

# REJUVENATION®

2550 N.W. Nicolai Street, Portland Oregon 97210 Customer Service: 888-401-1900 rejuvenation.com