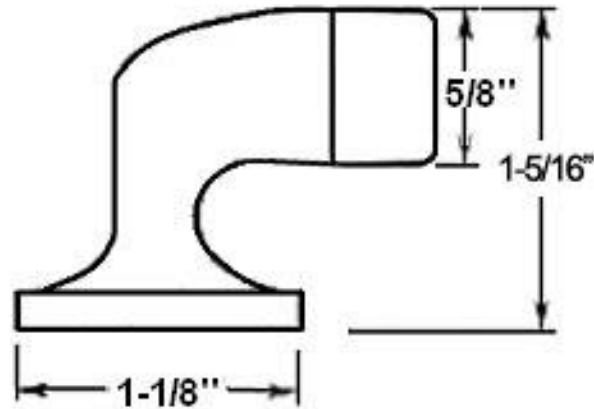


Installation Instructions
Professional Grade Quality Solid Brass
Mini Stop "Gooseneck"
Item# 13007

**Dimensions:**

- Overall Height: 1-5/16"
- Base Diameter: 1-1/8"
- Projection: 1-3/4"
- Net Weight: 2.5 oz.
- Gross Weight: 3 oz.
- Solid Brass Wood Hanger Screw: 1-1/8" exposed (1-1/2" total)
- Comes with 2 High Grade Rubber Tips (Black and Grey)

Dimensions are for reference use only.

For exact dimensions, please measure actual part.

Installation Instructions:

1. Place the door stop to the desired position on the floor so the door knob does not touch the wall
2. Mark and drill pilot hole
3. Twist and screw in the door stop
4. To change the rubber bumper, carefully pop out the bumper and be mindful not to scratch the finish

**Catalog Section: D****Mini Stop "Gooseneck"**

Item# 13007

Date: Rev 01/18