

# <u>Decorative Grab Bar</u>

### SMOOTH END WITH ROUND BASE

#### **Features**

- All brass construction
- 1-1/4" diameter bar
- · Concealed mounting
- Mounting hardware included




9418D-65 SHOWN

9412D-65 9418D-65 9424D-65 9430D-65 9436D-65 9442D-65 9448D-65


### **Codes/Standards Applicable**

Product meets or exceeds the following:

ADA compliant

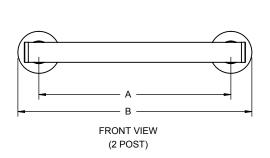


|        | DECORATIVE GRAB BAR | DIM. A | DIM. B            |
|--------|---------------------|--------|-------------------|
| 2 POST | 9412D-65            | 12"    | 14 <del>5</del> " |
|        | 9418D-65            | 18"    | 20 <del>5</del> " |
|        | 9424D-65            | 24"    | 26 <del>5</del> " |
|        | 9430D-65            | 30"    | 32 <del>5</del> " |
|        | 9436D-65            | 36"    | 38 <del>5</del> " |
| 3 POST | 9442D-65            | 21"    | 44 <del>5</del> " |
|        | 9448D-65            | 24"    | 50 <del>5</del> " |



FRONT VIEW (3 POST)

 $\frac{1}{2}$   $2\frac{3}{4}$   $01\frac{1}{4}$   $01\frac{1}{4}$  0 TOP VIEW

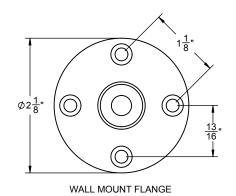

(8X) - 2 POST GRAB BAR
#8 X 1-3/4" PHILLIPS HEAD SCREW

(12X) - 3 POST GRAB BAR
#8 X 1-3/4" PHILLIPS HEAD SCREW

ALL DIMENSIONS SHOWN TO NEAREST 1/16"

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE



# 94XXD-30K 94XXD-33 94XXD-34 94XXD-45 94XXD-47 94XXD-48 94XXD-64 94XXD-65 94XXD-77 94XXD-85 **Decorative Grab Bar Installation Instructions**

### CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL


IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.

9412D-65 Shown Below

### PREPARING WALL FOR GRAB BAR

Important: It is the RESPONSIBILITY of the INSTALLER to provide a proper cross BRACE (I) to provide adequate support for the Grab Bar.


- Securely mount a suitable cross BRACE (1) with the front surface flush between studs in wall to provide proper support for grab bar
- Take note of where the BRACE (1) is mounted once the tile or drywall are in place.

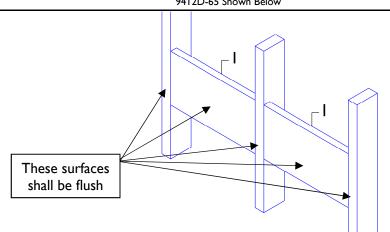



# POSITIONING GRAB BAR

Important: Grab BAR (2) must be installed on finished wall (e.g. tile or drywall).

- Wall MOUNT (2b) holes must be rotated in plus pattern "**+**" on grab BAR **(2)**
- Ensure grab BAR (2) is positioned over cross BRACE (1) or studs
- Place the grab BAR (2) to its desired location on the finished wall, using a level as necessary
- Mark the first 2 visible holes when viewing from the front
- Use the hex KEY (3) and loosen the SETSCREW (2c) to remove the wall MOUNT (2b) from the grab BAR (2)
- Line up the first 2 marked holes for each wall MOUNT (2b) and mark the last 2 holes

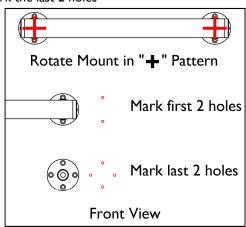

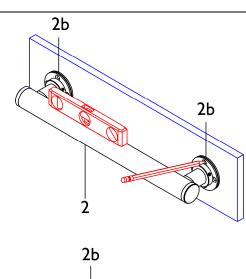

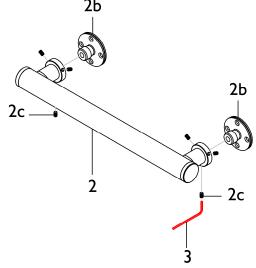

94XXD II 190131

# 3

#### **DRILLING HOLES**

**Note**: Based on finished wall surface (e.g. tile or drywall) there are different options for attaching the wall MOUNT **(2b)** to the wall.


#### **Tile Surface**

 Using 5/32" drill bit, drill through the tile and apply silicone sealant into the drilled holes

Important: Only drill through the tile depth and not into the cross BRACE (1) or stud.

### Drywall Surface (thickness 1/2" max)


 Using I/16" drill bit, drill to a depth of I½" into drywall and cross BRACE (I)

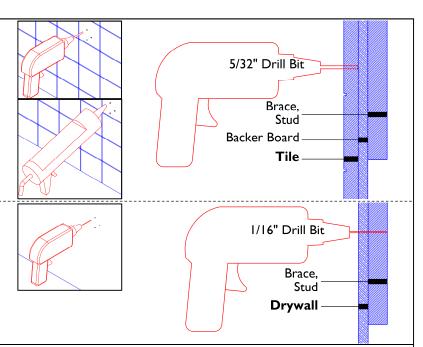

# 4

### **INSTALLING WALL MOUNT**

- Place and align each wall MOUNT (2b) with the drilled holes from Step 3
- Secure each wall MOUNT (2b) with the supplied #8 SCREW (4) onto the wall

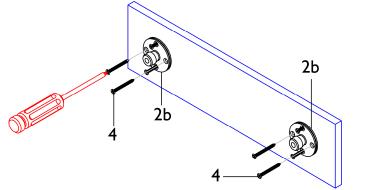

# 5

### **GRAB BAR INSTALLATION**

- Carefully slide the base RING (2a) back onto the grab BAR
   (2)
- Slide the grab BAR (2) onto the wall MOUNT (2b) and secure each SETSCREW (2c) with the hex KEY (3)
- Evenly press the base RING (2a) onto the wall MOUNT (2b)

**IMPORTANT:** Ensure the orientation of the slot on the back of the base ring is pointing down.

